

How to upgrade the Software

- 1** Connect the AC power and turn “ON” the TV receiver.
- 2** The USB reader is located on the left or right of the cabinet near the side control/jack assembly as shown in Figure 1.

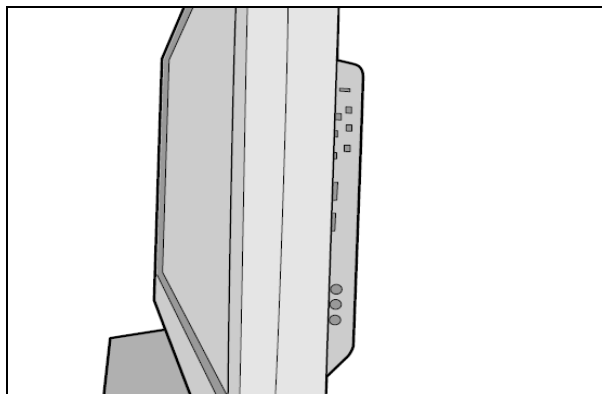


Figure 1

- 3** Insert the “USB Drive” into the USB slot as shown in Figure 2.

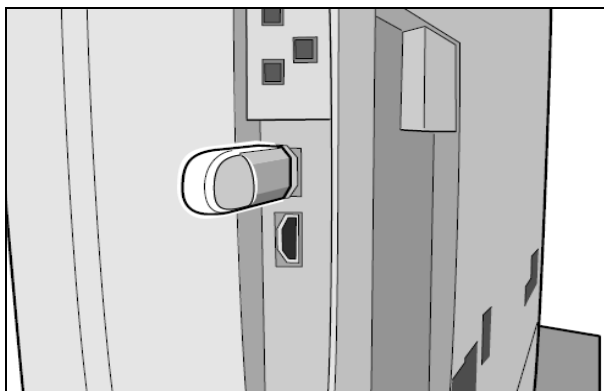


Figure 2

- 4** After insertion of USB Drive into reader slot a firmware upgrade information window will appear as shown in Figure 3.

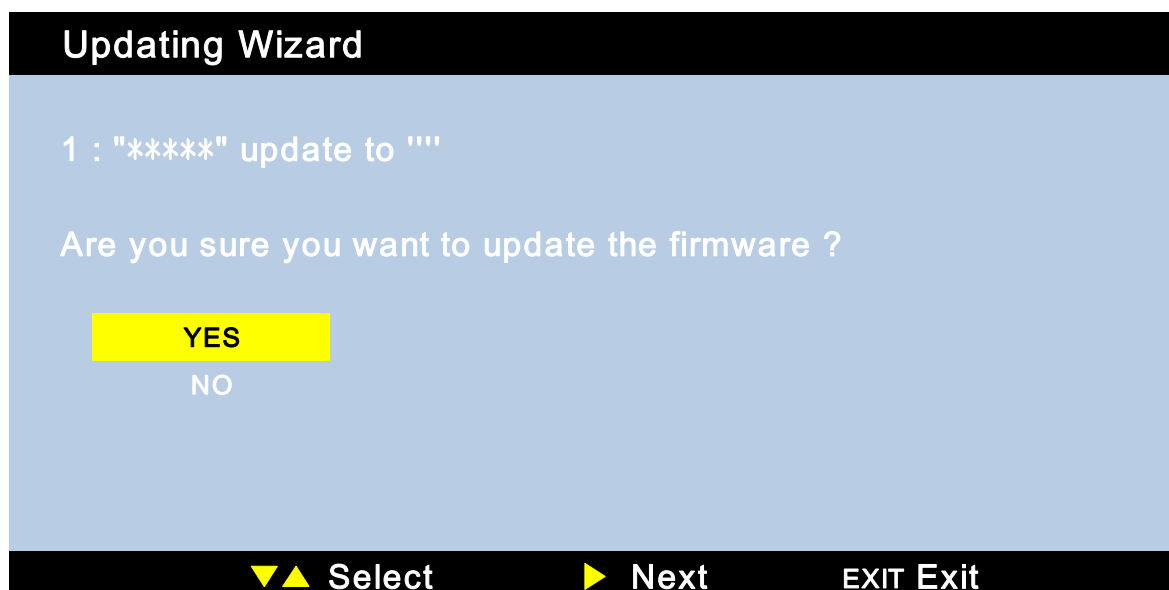


Figure 3

- 5** If the window is no present, remove the USB Drive and try reinserting the USB Drive again.
- 6** Start the software upgrade by using the "Up or down arrow" key of the remote control to select "Yes".
- 7** Press "OK" key of the remote control to begin the upgrade.
- 8** The software upgrading process will begin. During the software upgrade, the TV receiver will display "Updating... don't AC power off" as shown in Figure 4.

During this time, do not remove power to the television or press any remote keys or buttons on the television until the upgrade is complete!

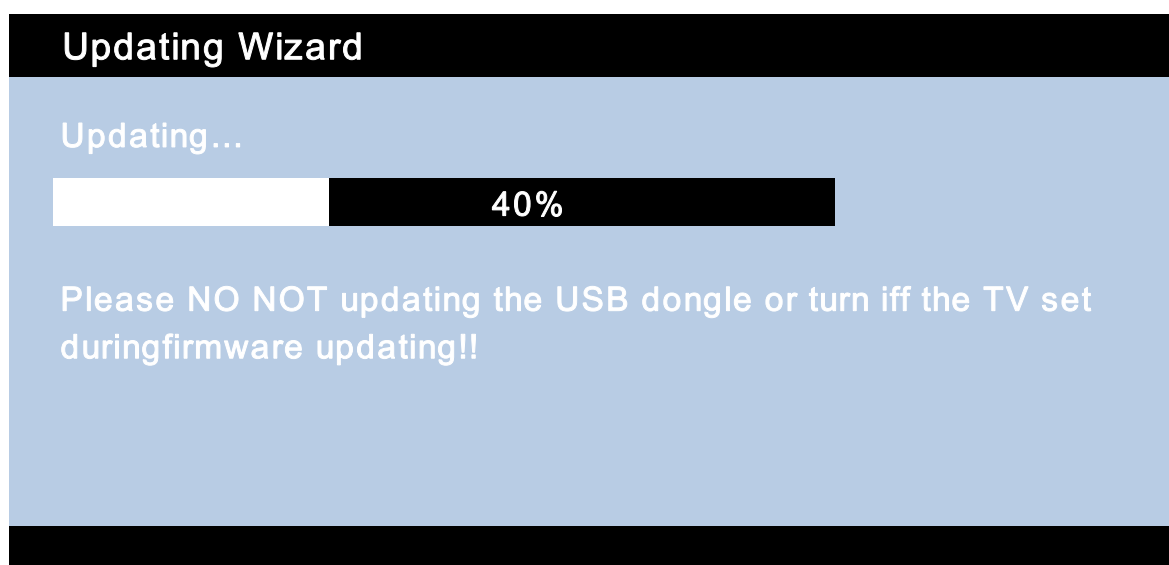


Figure 4

- 9** Upon completion of the software upgrade a message will appear as shown in Figure 5.

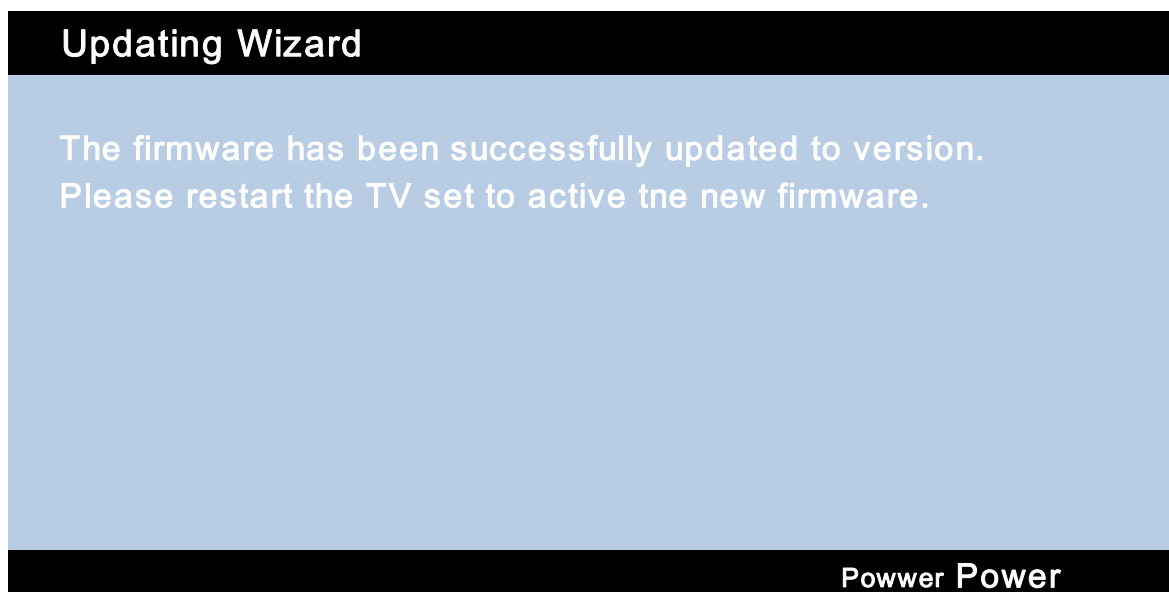


Figure 5

- 10** Remove the "USB Drive" from the reader slot.
Momentarily remove AC power from set by unplugging the AC power cord.
Plug the TV back into the AC power. The TV should turn back on.
- 11** The TV upgrade is now complete.