


# Service Manual

Amplifier

Amplifier

SE-CH610

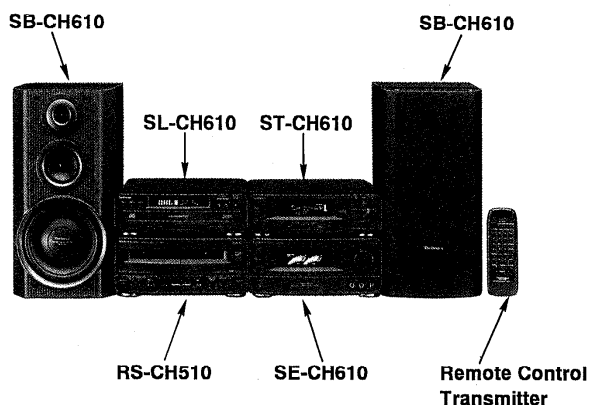

Colour

(K) : Black

## Areas

Suffix for Model No.	Area	Colour
(GC)	Asia, Latin America, Middle East and Africa	(K)

## System: SC-CH610

Because of unique interconnecting cables, when a component requires service, send or bring in the entire system.

## Specifications

## Power output

DIN 1 kHz, THD 1%, both channel driven

2 × 50 W (6Ω)

## Total harmonic distortion

Rated power at 1 kHz

1% (6Ω)

Half power at 1 kHz

0.09% (6Ω)

## Load impedance

6Ω

## S/N (rated power)

84 dB

## Frequency response

40 Hz – 30 kHz

## ■ General

## Power consumption

166 W

## Power supply

110/127/220/230 – 240 V, AC 50/60 Hz

## Dimensions (W × H × D)

270 × 118.5 × 329.5 mm

## Weight

4.4 kg

## Notes:

Specifications are subject to change without notice.  
Weight and dimensions are approximate.  
Total harmonic distortion is measured by the digital spectrum analyzer.

System	Tuner/sound processor	Compact disc changer	Amplifier	Cassette deck	Speakers
SC-CH610	ST-CH610	SL-CH610	SE-CH610	RS-CH510	SB-CH610

## ⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

# Technics®

© 1995 Matsushita Electric Industrial Co., Ltd.  
All rights reserved. Unauthorized copying and distribution is a violation of law.

## Contents

	Page		Page
Before Repair .....	2	Power Source ON/OFF of This Unit .....	11
Protection Circuitry .....	2	Schematic Diagram .....	11~15
Accessories .....	2	Printed Circuit Board Diagram .....	16~18
Stacking the Components .....	3	Wiring Connection Diagram .....	19
Connections .....	3~7	Function of IC Terminals .....	19
Location of Controls .....	7	Block Diagram .....	20
Operation Check and		Replacement Parts List .....	21~24
Main Component Replacement Procedures .....	8~10	Cabinet Parts Location .....	25
		Packaging .....	26, 27

## Before Repair

- Turn off the power supply. Using a 10  $\Omega$ , 10 W resistor, connect both ends of power supply capacitors (C701, C702) in order to discharge the voltage.
- Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50/60 Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110 V/127 V/220 V/240 V.

Power supply voltage	AC 110~127 V	AC 220~240 V
Consumed current 50Hz	140~380 mA	70~190 mA

## Protection Circuitry

The protection circuitry may have operated if either of the following conditions is noticed:

- \* No sound is heard when the power is switched ON.
- \* Sound stops during a performance.

The functions of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.












If this occurs, follow the procedure outlined below:

- Switch OFF the power.
- Determine the cause of the problem and correct it.
- Switch ON the power once again.

### Note:

When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.


## Accessories
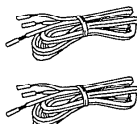
<ul style="list-style-type: none"> <li>AC power supply cord (RJA0019-2K) ..... 1</li> </ul> 	<ul style="list-style-type: none"> <li>Flat cable Long (REX0511) ..... 1 Short (REX0608) ..... 1</li> </ul> 	<ul style="list-style-type: none"> <li>Remote control transmitter (RAK-CH159WH) ..... 1</li> </ul> 
<ul style="list-style-type: none"> <li>Batteries (UM-4, "AAA", R03) ..... 2</li> </ul> <p><b>Note:</b> These are available on sales route.</p> 	<ul style="list-style-type: none"> <li>AM (LW/MW) loop antenna (RSA0012) ..... 1</li> </ul> 	<ul style="list-style-type: none"> <li>Antenna holder (RMN0244) ..... 1</li> </ul> 
<ul style="list-style-type: none"> <li>Mounting screw (XTN3+12AFZ) ..... 1</li> </ul> 	<ul style="list-style-type: none"> <li>FM indoor antenna (RSA0007) ..... 1</li> </ul> 	<ul style="list-style-type: none"> <li>Antenna plug (RFE0014) ..... 1</li> </ul> 
<ul style="list-style-type: none"> <li>Speaker cords (REE0499) ..... 2</li> </ul> 	<ul style="list-style-type: none"> <li>Power plug adaptor (SJP5213-1) ..... 1</li> </ul> 	


## Stacking the Components

- Install the various components as shown in the illustration.
- To produce a better stereo sound, install both speakers away from the system.
- The configuration of the amplifier differs according to the area.


### Horizontal stacking **A**

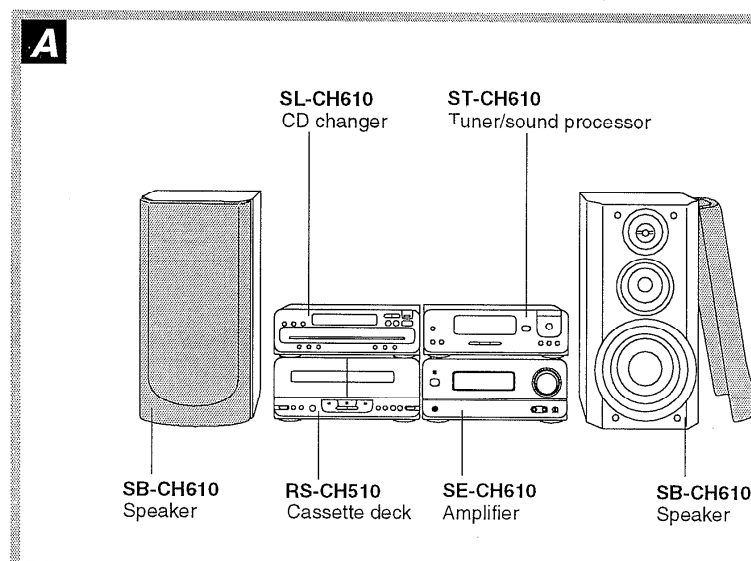

### Vertical stacking **B**

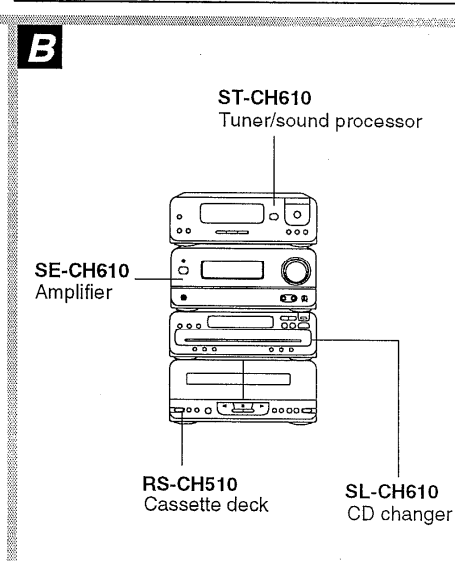

## Connections

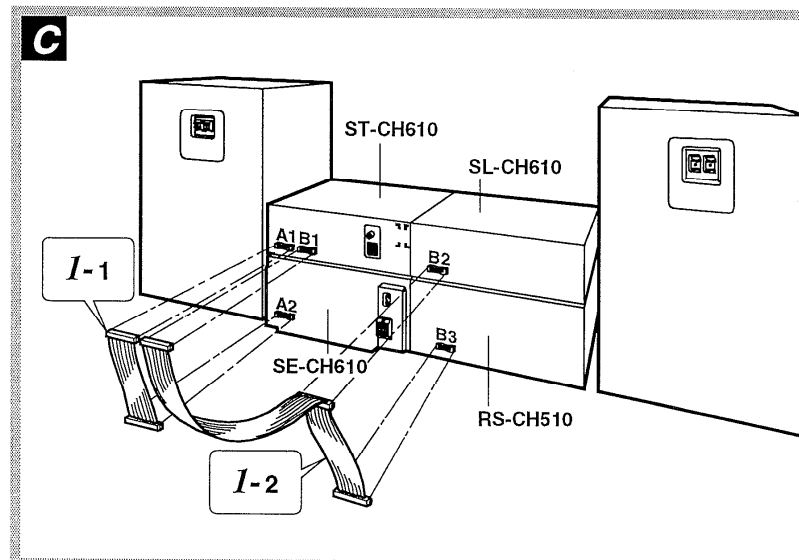


### I

Connecting

Disconnecting



Heat outlet grille



### System connections **C**

Connect the AC power supply cord after you have connected all other cables.

#### I Connect the flat cables.

Hold the connector with the recessed part up and press in at the center until you hear a click.


1. Connect the shorter flat cable to the terminal of the tuner/sound processor and amplifier.
2. Connect the longer flat cable to the terminal of the tuner/sound processor, compact disc changer, and cassette deck.

Be sure to connect the blue-colored connector to B1 (tuner/sound processor).

After connection, hold and press the cable as flat to the back of the unit as possible. (To minimize noise pickup while listening an AM broadcast)

**Do not try connecting or disconnecting the flat cables while the power is switched to ON.**

(To be continued)

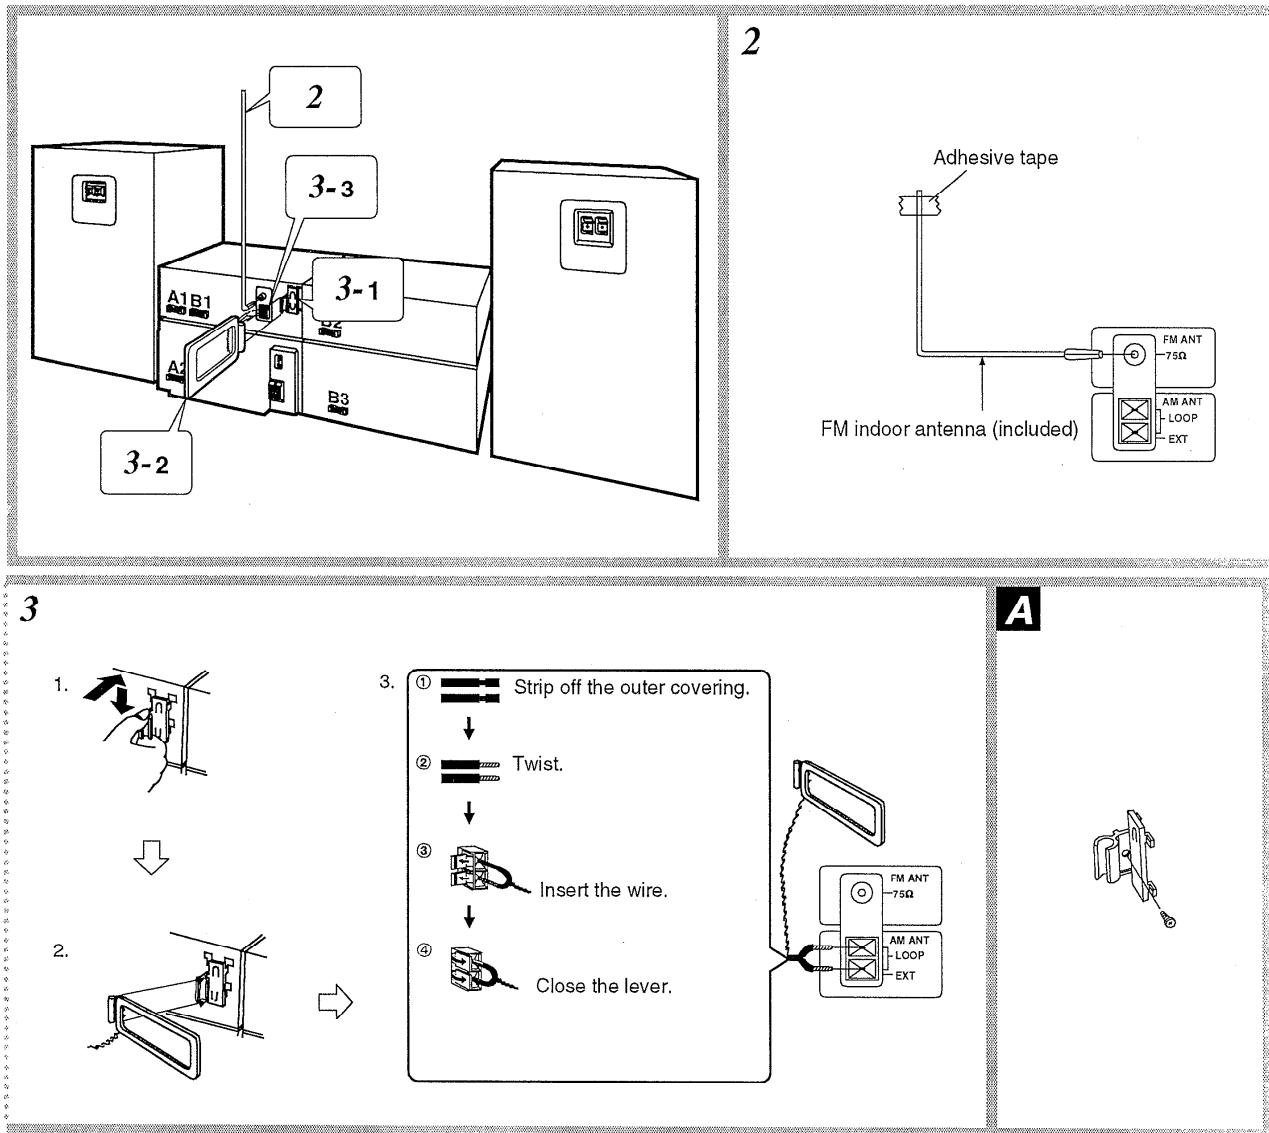

## 2 Connect the FM indoor antenna.

Install the antenna on a wall at a height and in a direction which result in the best reception.

The tip of the internal antenna wire should not come into contact with any metal objects.

When you cannot get a good reception with this FM indoor antenna, we recommend you install an FM outdoor antenna (not included).

## 3 Connect the AM (MW/LW) loop antenna.

1. Attach the antenna holder to the rear panel of the tuner/sound processor. Press the antenna holder hard enough to get it fixed firmly in the place, with a click.
2. Clamp the antenna to the antenna holder.
3. Connect the antenna terminal to the rear panel of the tuner/sound processor.

(After you have connected all other cables)


4. While listening to an MW/LW broadcast, position the loop antenna for the best reception.

You may attach the antenna holder to a rack or other structure. Use a screw (included) to attach as shown in the figure. **A**


### Note

To minimize noise pickup, keep the AM loop antenna cord away from the flat cables.


(To be continued)

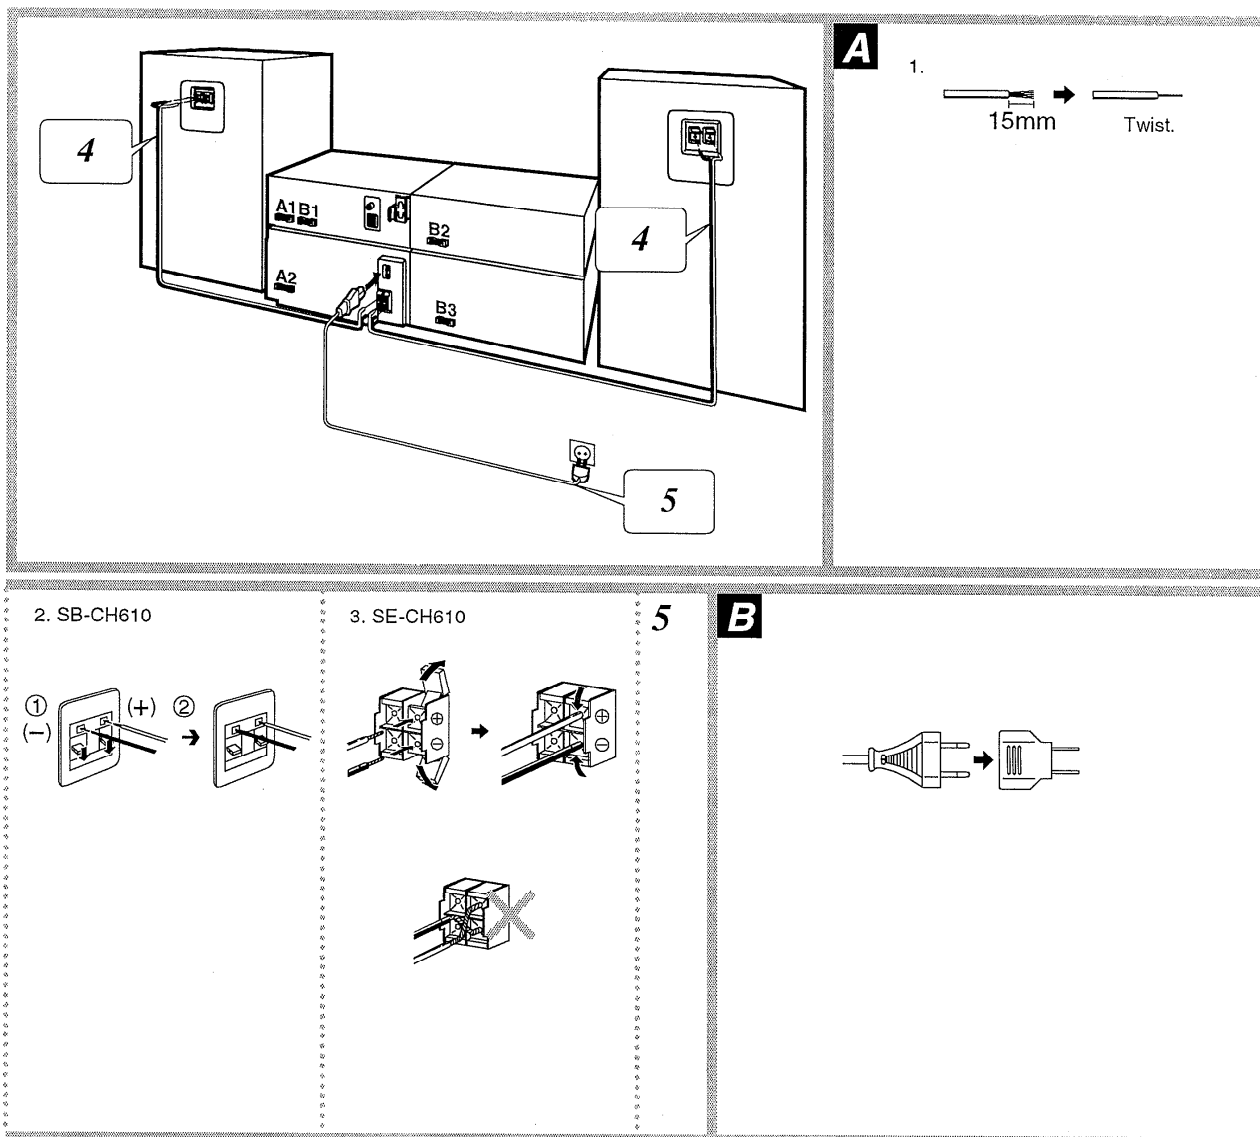

2. SB-CH610



3. SE-CH610

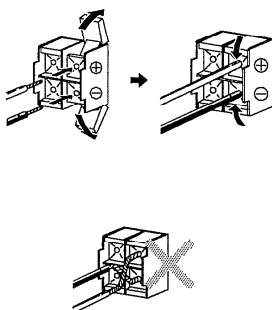

5

#### 4 Connect the right (R) left (L) speaker cables.

##### Notes

- Be sure to connect speaker cables before connecting the AC power supply cord.
- The load impedance of any speaker used with this unit must be 6–8Ω.

##### Connection of speaker cables **A**

1. Strip off the outer covering, and twist the center conductor. Make sure the bare ends of the wires are not unraveled. (If they are, twist them tight again.)
2. ① Tilt the lever back and insert the wire.  
② Close the lever and pull the cord gently to be sure that it is secured.
3. Insert the wire to the rear panel of the amplifier, and close the lever.


##### Notes

- To prevent damage to circuitry, never short-circuit positive (+) and negative (–) speaker wires.
- Be sure to connect only positive (+) wires to positive (+) terminals and negative (–) wires to negative (–) terminals.

#### 5 Connect the AC power supply cord after you have connected all other cables and cords.

If the power plug will not fit your socket, use the power plug adaptor (included).

(To be continued)

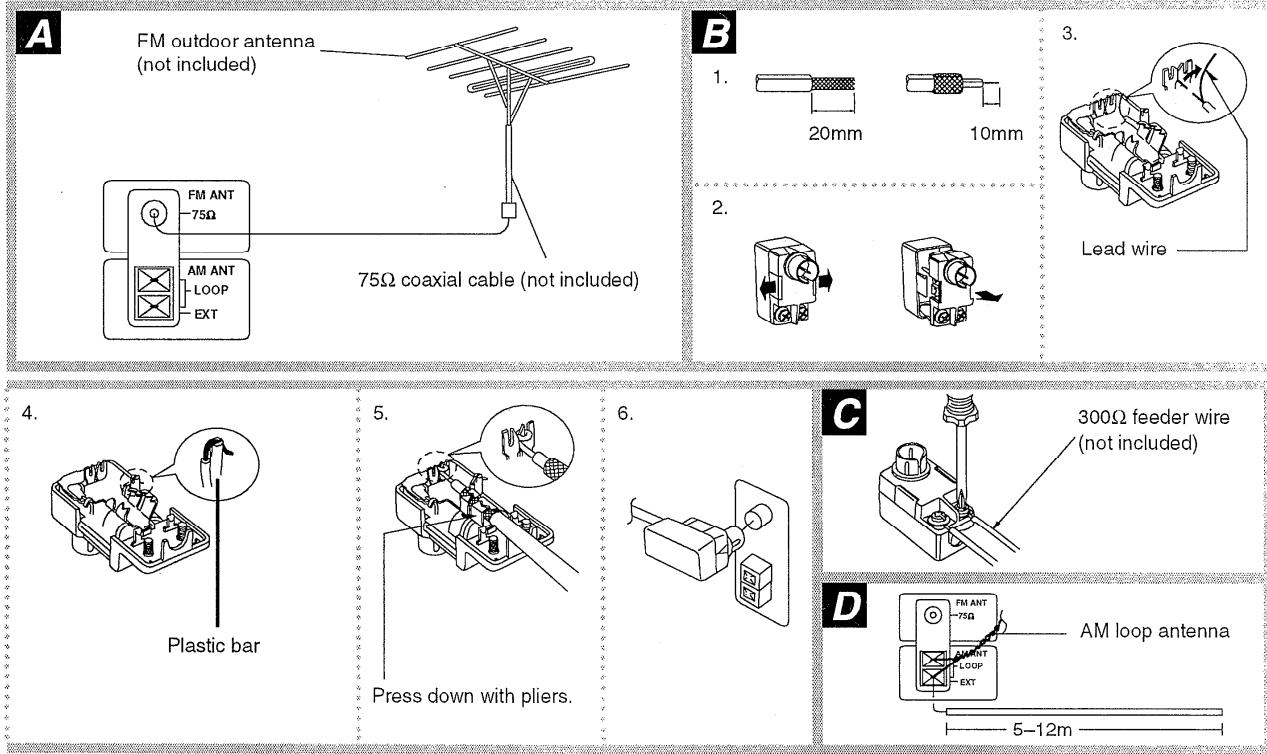

### Optional antenna connections

#### FM outdoor antenna (not included) **A**

You may need an outdoor antenna if you use this system in a mountainous region or inside a reinforced-concrete building, etc. An outdoor antenna should be installed by a competent technician only.

#### How to use the antenna plug (included)

Two types of wire are most commonly used for connection from the antenna: 300Ω parallel feeder wire or 75Ω coaxial cable. For best resistance to outside interference, the use of 75Ω coaxial cable is suggested.

#### To connect a 75Ω coaxial cable **B**

1. Remove a piece of the outer vinyl insulator.
2. Remove the cover while pulling the tabs.

#### Note

If the tabs are pulled too hard, the casing may be damaged.

3. Remove the lead wire.
4. Clamp the lead wire with the plastic bar.
5. Install the coaxial cable.  
Clamp the cable conductor, and wind it on so that it doesn't contact anything else.
6. Attach the cover and connect the antenna plug.

#### To connect a 300Ω feeder wire **C**

Loosen the screw to connect the feeder wire and tighten it to secure the connection.


#### AM (MW/LW) outdoor antenna (not included) **D**

An outdoor antenna may be required in a mountainous region, or if this system is located inside a reinforced-concrete building, etc.

Connect the outdoor antenna without removing the AM loop antenna.

Run 5 to 12 m of vinyl-covered wire horizontally along a window or other convenient location.

(To be continued)

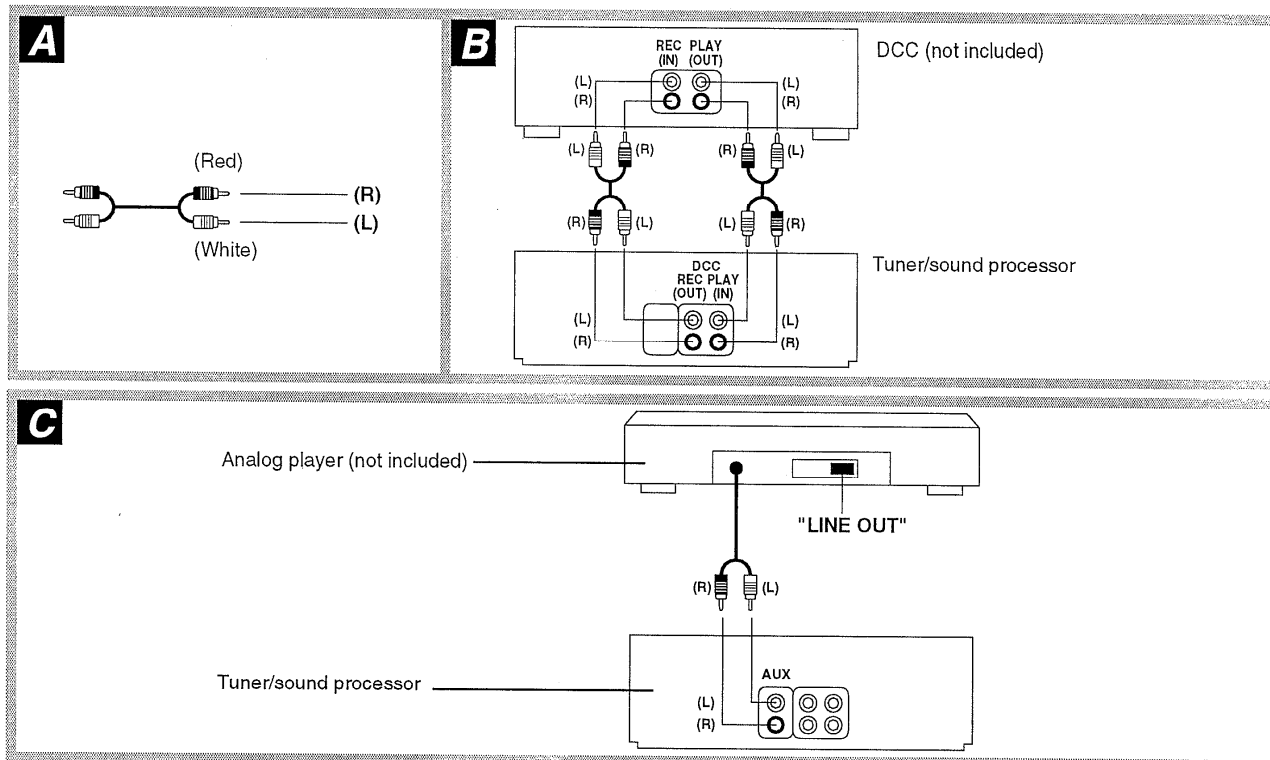

### External unit connection

- For details, refer to the Operating Instructions of the units which are to be connected.
- When units other than those described below are to be connected, please consult with your audio dealer.

#### Connecting the stereo connection cable (not included) **A**

Connect the red plug to the right (R) connector.  
Connect the white plug to the left (L) connector.

#### DCC (digital compact cassette deck) **B**

### Analog player

This example shows how to connect the analog player with the PHONO OUT/LINE OUT switch.

Only an analog player with a built-in phono equalizer can be connected.

Set the LINE OUT position at the back of the analog player.

## Location of Controls

### ① Power "STANDBY $\odot$ /ON" switch (POWER, STANDBY $\odot$ /ON)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

### ② Standby indicator (STANDBY)

When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.

### ③ Display section


Power meter display shows the left and right output level.

### ④ Volume control

### ⑤ Headphones jack $\varnothing$ 3.5, 32 $\Omega$

### ⑥ Microphone jack(s) $\varnothing$ 6.3, 600 $\Omega$

### ⑦ Microphone volume control

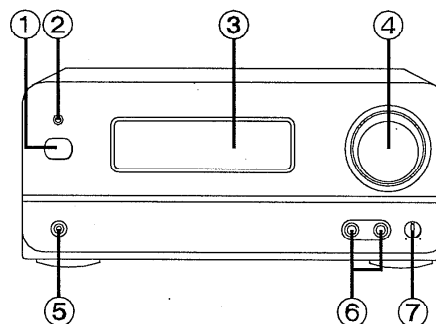

## ■ Operation Check and Main Component Replacement Procedures

### NOTE

1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.
3. Select items from the following index when checks or replacement are required.
4. Illustrated screws are equivalent to actual size.
5. Refer the parts No. on the page of "Main Component Replacement Procedures", if necessary.

### ● Contents

#### ● Checking Procedure for each P.C.B.


- |  | Page |
|--|------|
| 1. Checking for the operation P.C.B. and power transformer P.C.B. .... | 8.   |
| 2. Checking for the main P.C.B. ....                                   | 9.   |

#### ● Main Component Replacement Procedures


- |   |     |
|---|-----|
| 1. Replacement for the power IC and regulator transistors ..... | 10. |
| 2. Replacement for the fan motor .....                          | 10. |

## ■ Checking Procedure for each P.C.B.

### 1. Checking for the operation P.C.B.

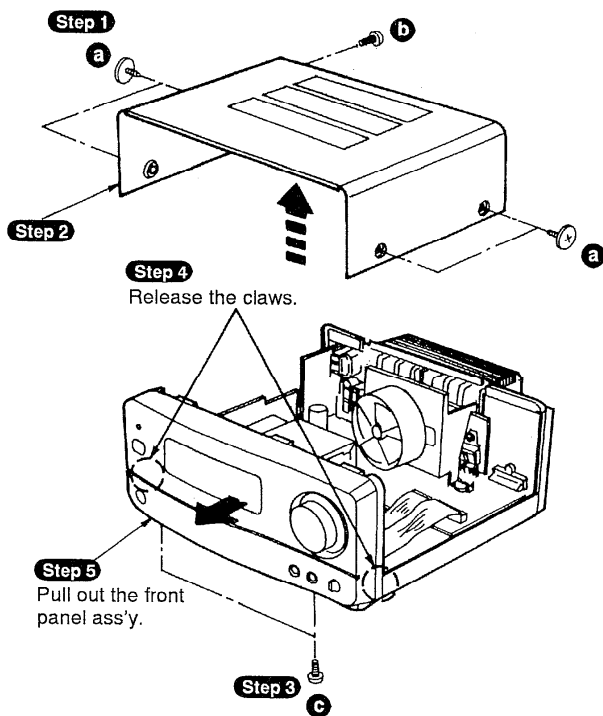

- Checking for the operation P.C.B. as shown below.

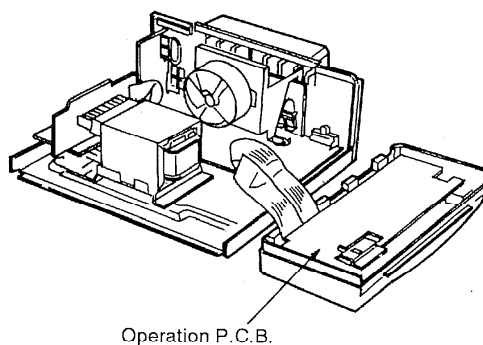

a

[RHD30007-K1] (Black)




b, c


[XTBS3+8JFZ1] (Black)



## 2. Checking for the main P.C.B.

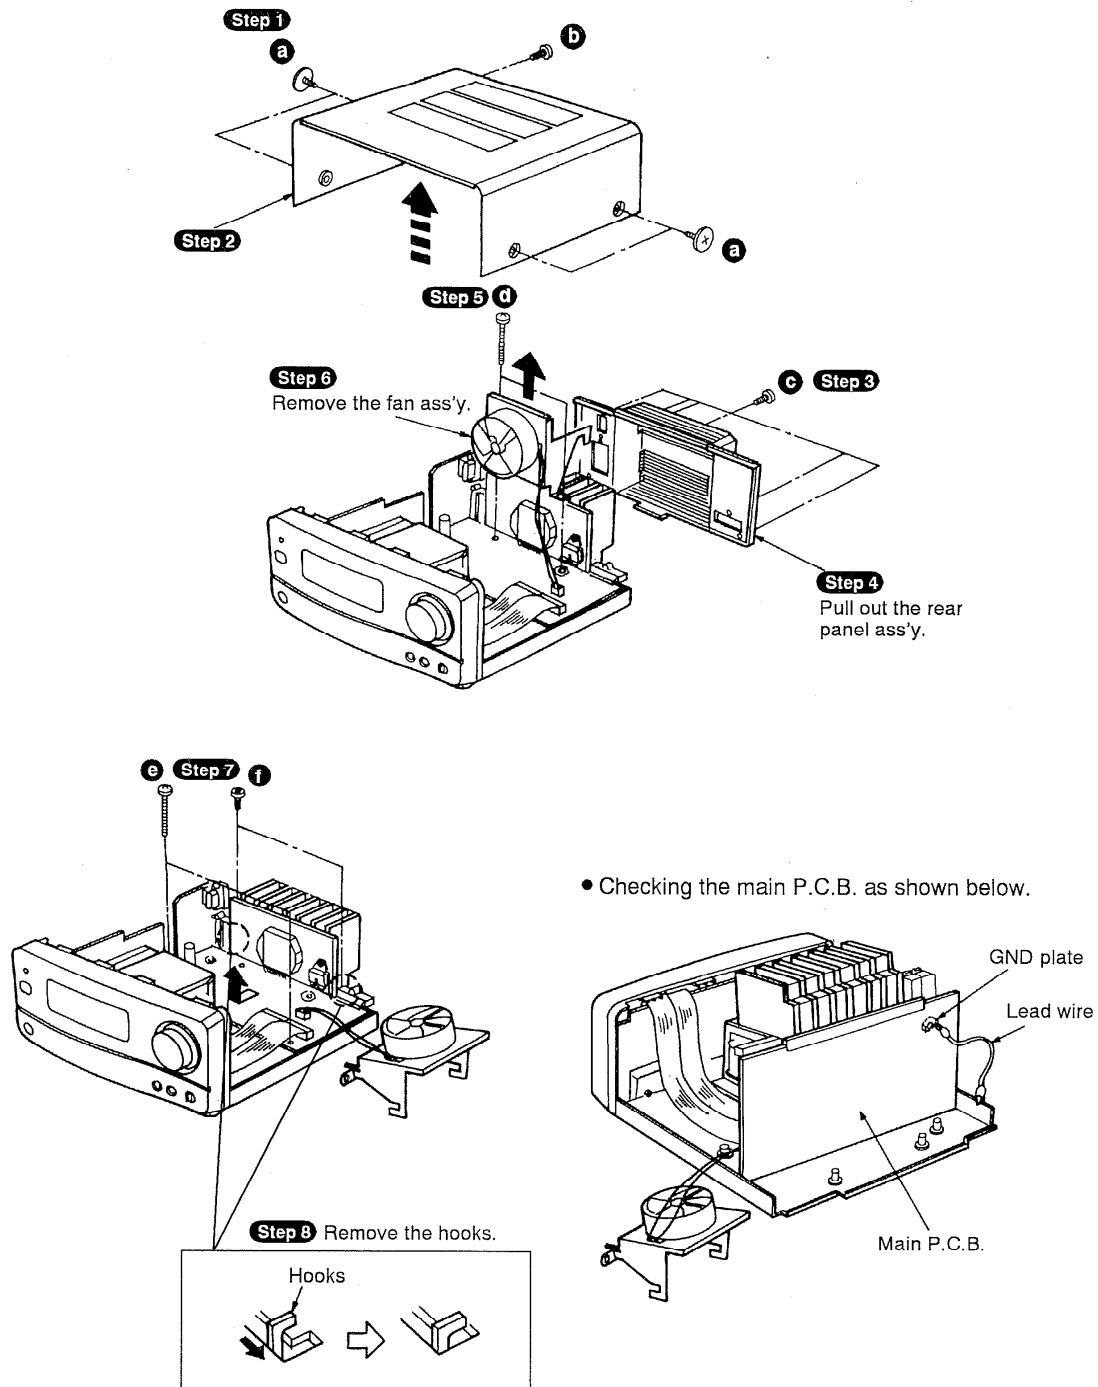

[RHD30007-K1] (Black)



[XTBS3+8JFZ1] (Black)



[XTB3+20JFZ] (Black)



[XTB3+8JFZ] (Black)


## ■ Main Component Replacement Procedures

### 1. Replacement for the power IC and regulator transistors

- Follow the item 2 in checking procedure for each P.C.B. on page 9.

#### NOTE


When mounting the power IC or regulator transistor, apply silicone compound (RFKX0002) to the rear side of power IC or regulator transistors.

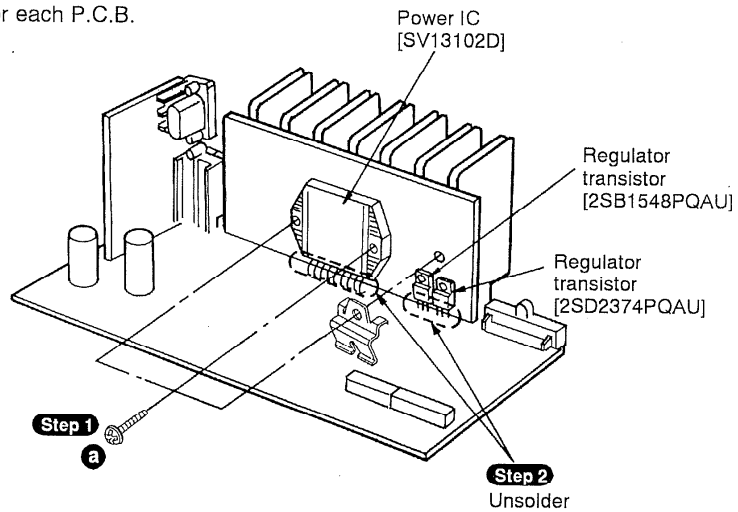

[XTW3+15T]

### 2. Replacement for the fan motor

- Follow the **Step 1** **Step 2** **Step 5** **Step 6** in item 2 on checking procedure for each P.C.B on page 9.

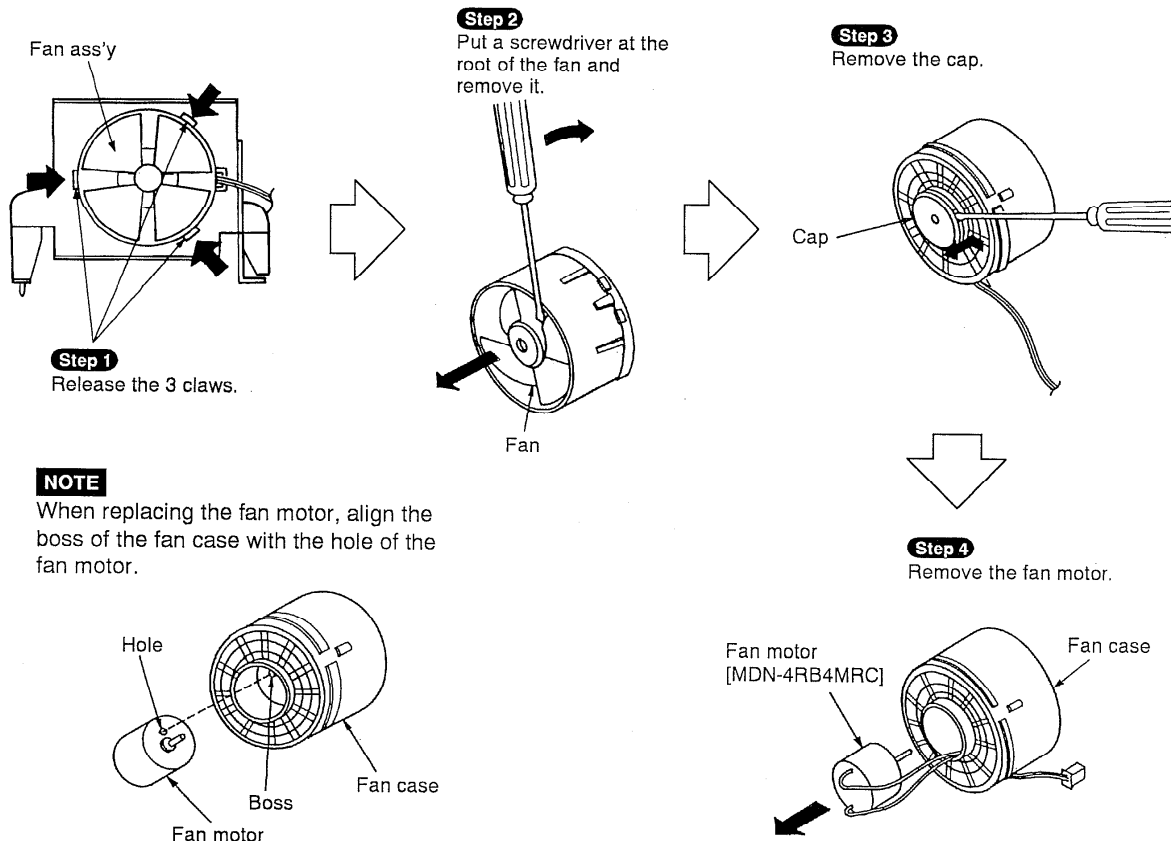

## ■ Power Source ON/OFF of This Unit

1. Connect the AC power cord of this unit to an AC outlet and turn it on.  
(This unit comes to stand-by mode.)
2. Make test point **TP701** short as shown in Fig. 1.  
POWER indicator lights and this unit comes to power ON mode.

### Operation Check

1. Set this unit to power ON mode.
2. Input a signal (1 kHz, 100 mV) to the section between the resistor **R611** (LINE IN for L-ch) and the capacitor **C906** (LINE IN GND) as well as the section between the resistor **R612** (LINE IN R-ch) and the capacitor **C906**.
3. Connect the speaker to the speaker terminals and check if it sounds from the speaker.

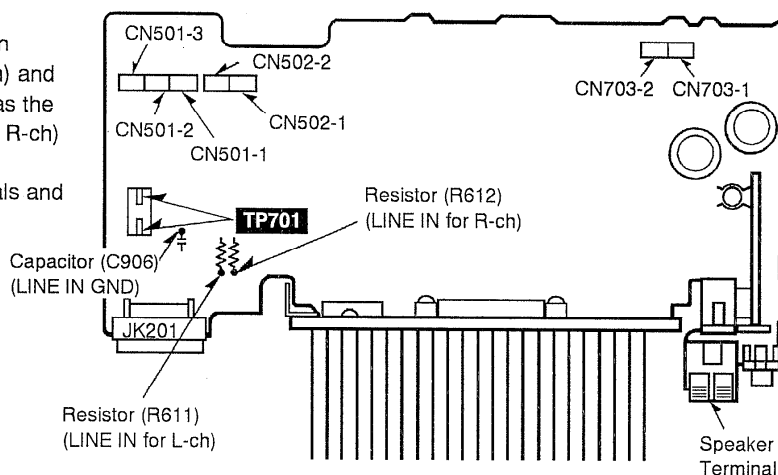


Fig. 1

## ■ Schematic Diagram

<b>A</b> OPERATION CIRCUIT .....	12, 13
<b>B</b> HEADPHONES JACK CIRCUIT .....	12
<b>C</b> MIC JACK CIRCUIT .....	12
<b>D</b> MAIN CIRCUIT .....	14, 15
<b>E</b> POWER TRANSFORMER CIRCUIT .....	15
<b>F</b> VOLTAGE SELECTOR CIRCUIT .....	15
<b>G</b> AC INPUT TERMINAL CIRCUIT .....	15

• This schematic diagram may be modified at any time with the development of new technology.

### Notes:

- **S601** : Power "STANDBY  $\phi$  /ON" switch (STANDBY  $\phi$  /ON)
- **S701** : Voltage select switch in 220 V position
- **VR401** : Microphone volume control (MIC VOLUME)
- **VR601** : Volume control (VOLUME)

- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.  
No mark: Power ON

### • Important safety notice:

Components identified by  $\triangle$  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

### • Caution!


IC and LSI are sensitive to static electricity.  
Secondary trouble can be prevented by taking care during repair.  
Cover the parts boxes made of plastics with aluminum foil.  
Ground the soldering iron.  
Put a conductive mat on the work table.  
Do not touch the legs of IC or LSI with the fingers directly.

### • Voltage and signal line

- : Positive voltage line
- : Negative voltage line
- : Source signal Line (L-ch)
- : Mic signal (L-ch)


# A OPERATION CIRCUIT

(Printed Circuit Board: on page 16)

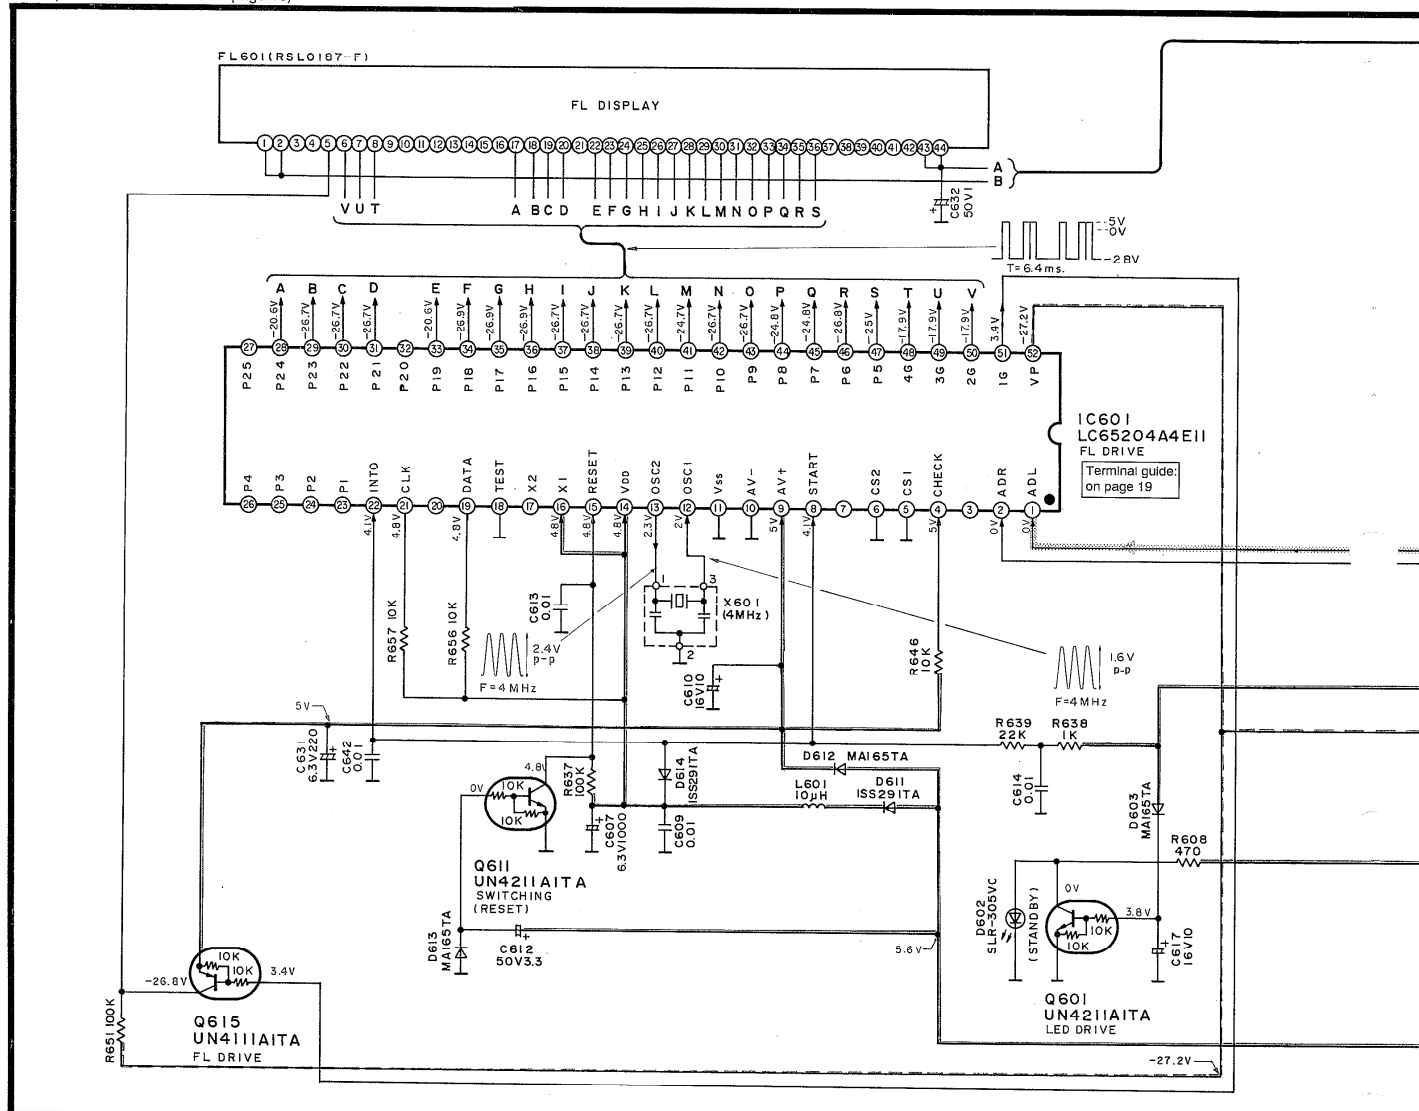



## B HEADPHONES JACK CIRCUIT

(Printed Circuit Board: on page 16)

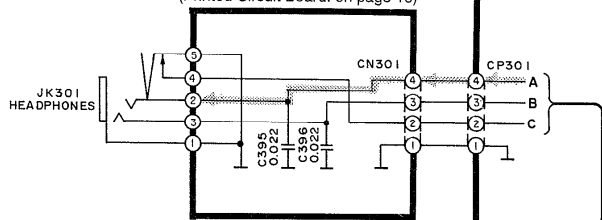



## C MIC JACK CIRCUIT

(Printed Circuit Board: on page 16)

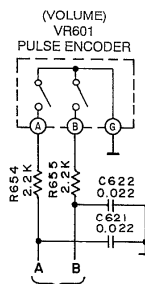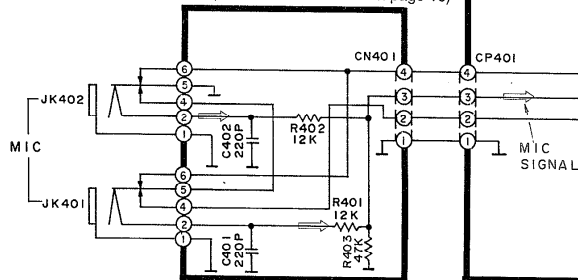



## (MIC VOLUME)

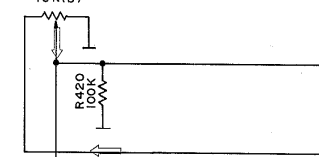



# **D MAIN CIRCUIT (HEADPHONES AMP/MOTOR DRIVE/REGULATOR/POWER AMP)** (Printed Circuit Board: on page 17)

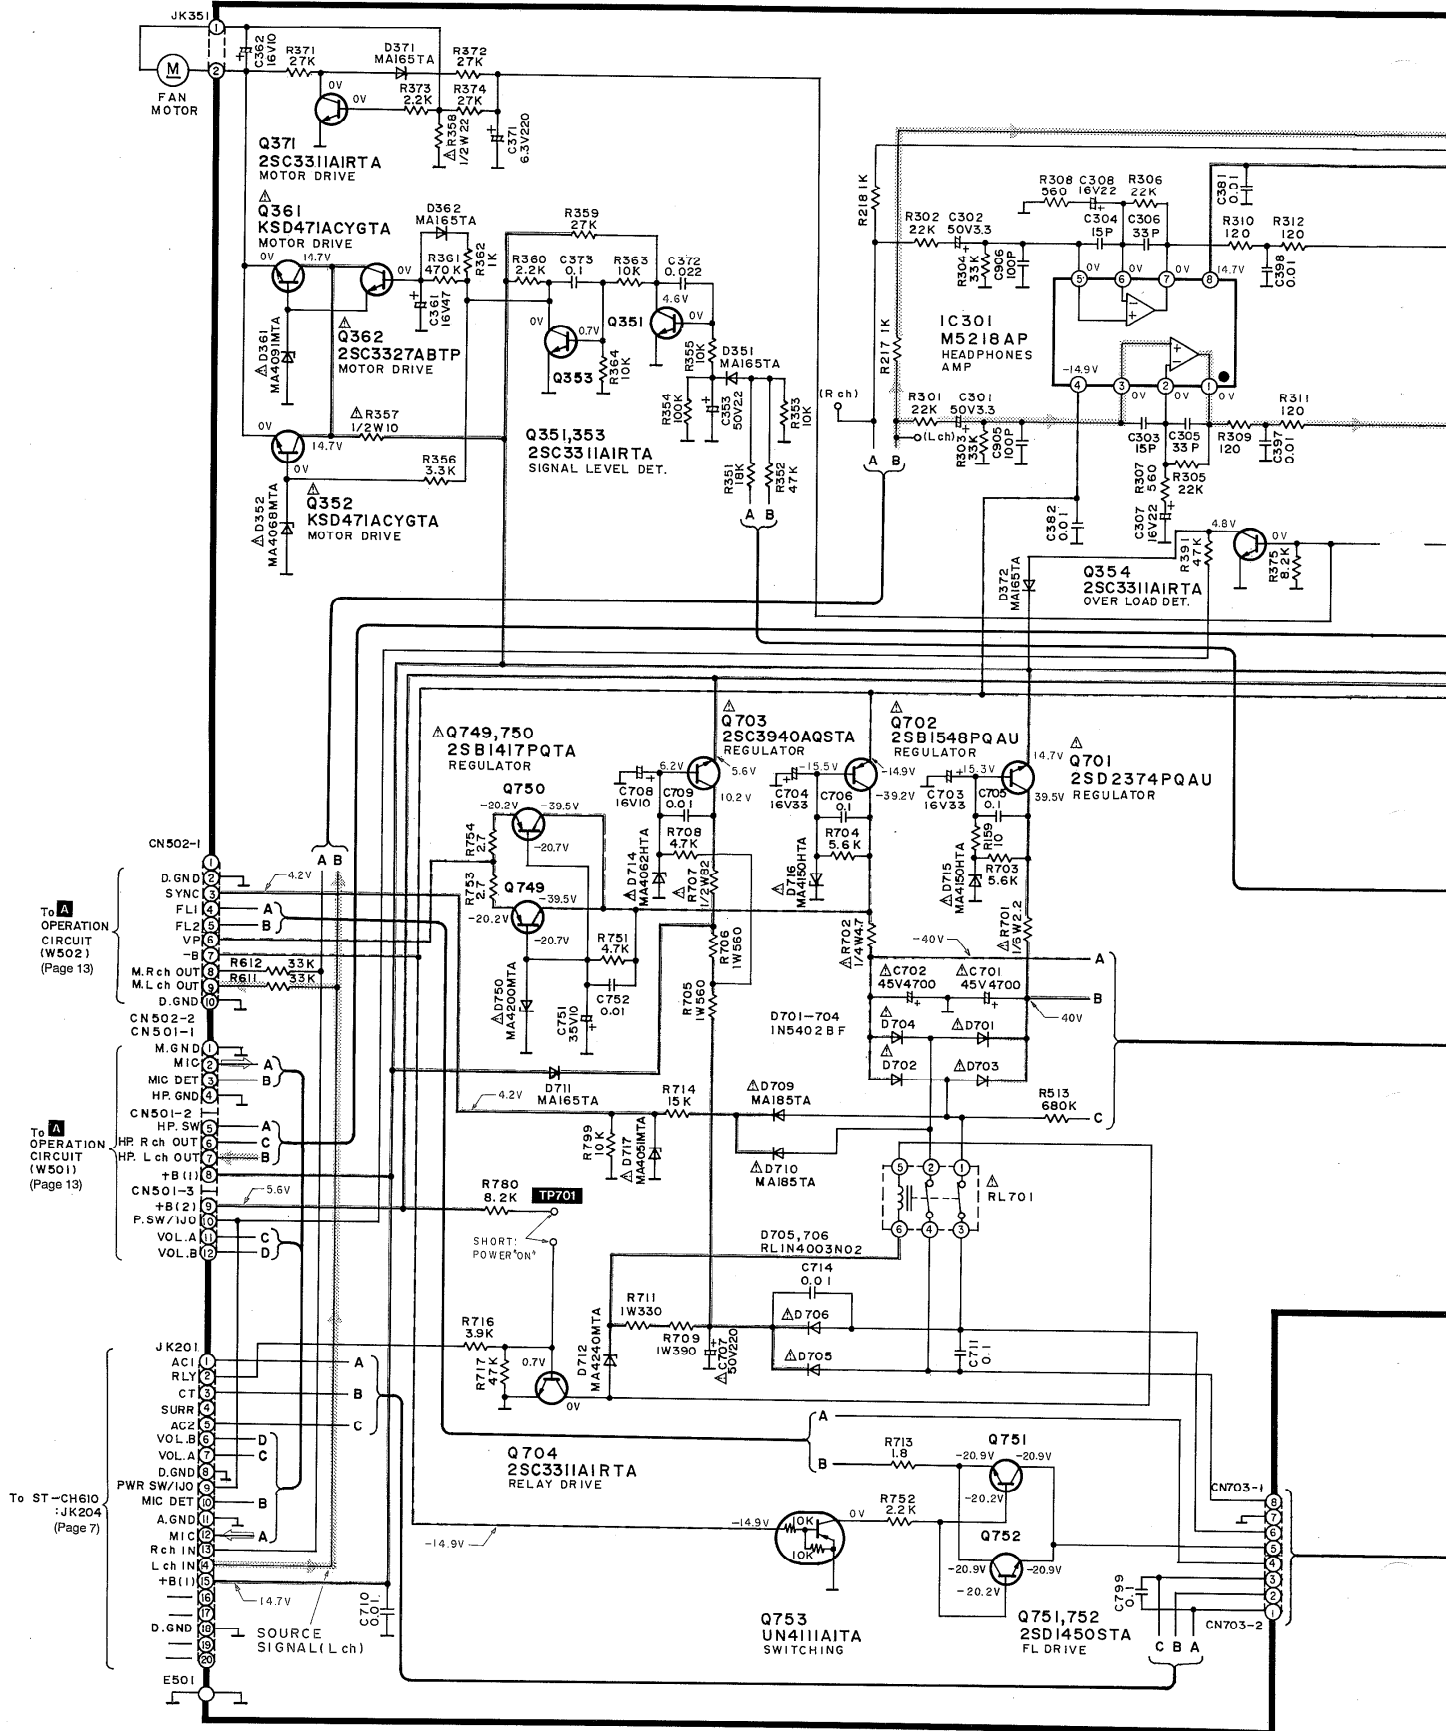


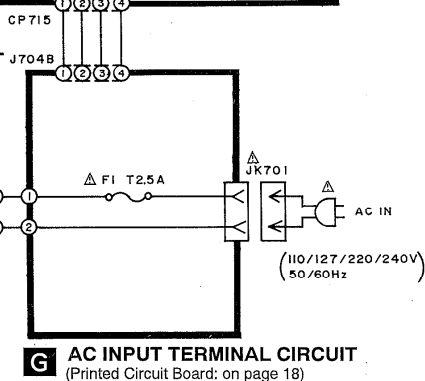


# Printed Circuit Board Diagram

- This circuit board diagram may be modified at any time with the development of new technology.

## A OPERATION P.C.B. (REP1981A-S)


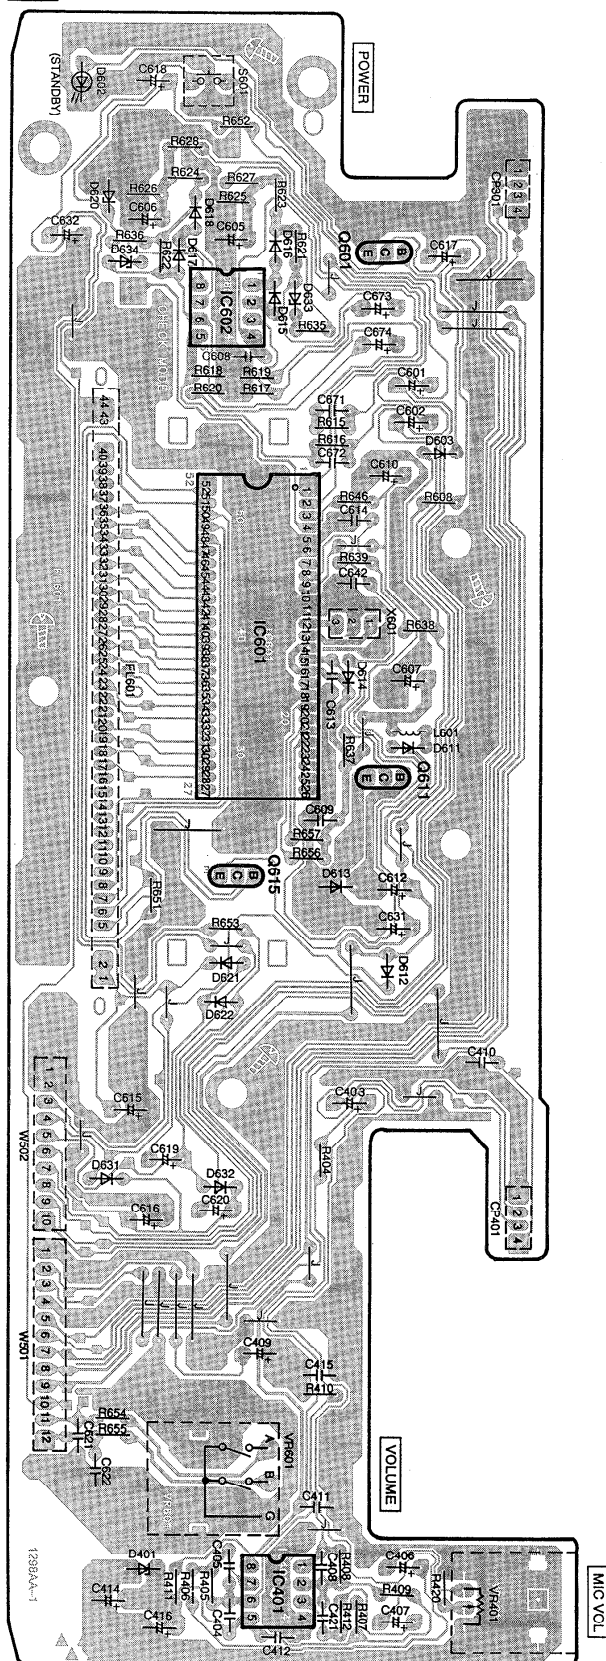


## B HEADPHONES JACK P.C.B. (REP1981A-S)

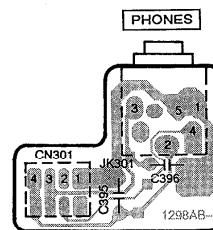




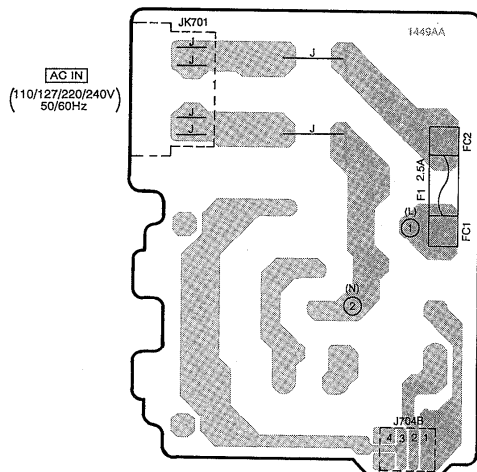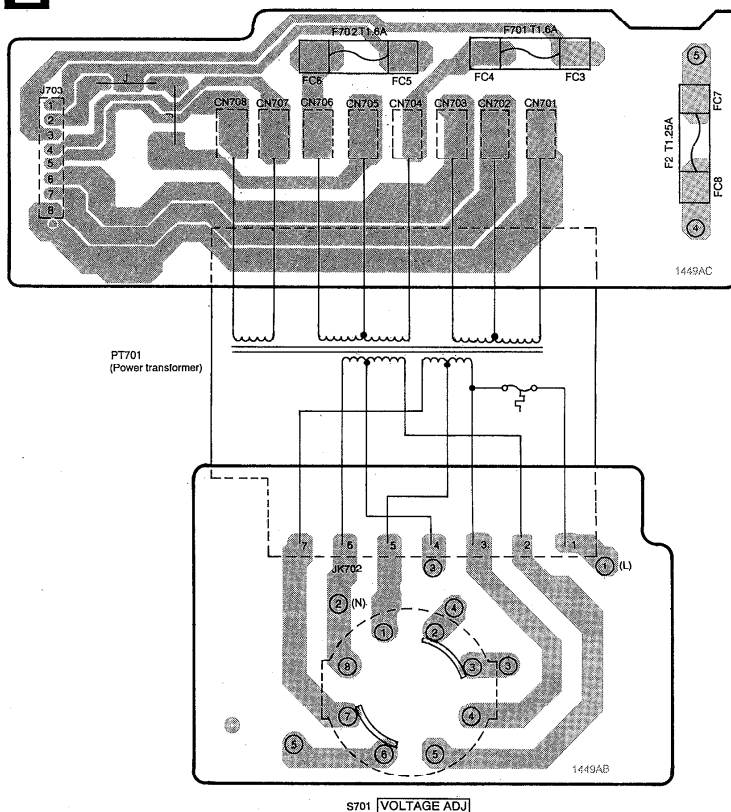

**G** AC INPUT TERMINAL  
P.C.B. (REP1451U-P)**E** POWER TRANSFORMER P.C.B. (REP1451U-P)**F** VOLTAGE SELECTOR P.C.B. (REP1451U-P)

<b>M5218AP</b> 	 AN6558F 8 Pin BA4558DX 8 Pin LC65204A4E11 52 Pin	<b>SVI3102D</b> 	<b>2SB1548PQAU</b> <b>2SD2374PQAU</b> 	<b>KSD471ACYGTA</b> 
<b>2SC3327-A</b> 	<b>2SC3940AQSTA</b> 	 UN4111AITA UN4115 UN4211 2SA1309AIQTA 2SC3311AIRTA 2SD1450RTA	<b>2SB1417PQTA</b> 	<b>1N5402BF</b> <b>RL1N4003N02</b> 
<b>MA4150M</b> <b>MA4200M</b> <b>MA4240H</b> 	<b>MA185TA</b> <b>1SS291TA</b> 	 MA4043M MA4051MTA MA4062MTA MA4062-H MA4068M MA4091-N	<b>SLR-305VC</b> 	<b>MA165</b> 

# Wiring Connection Diagram

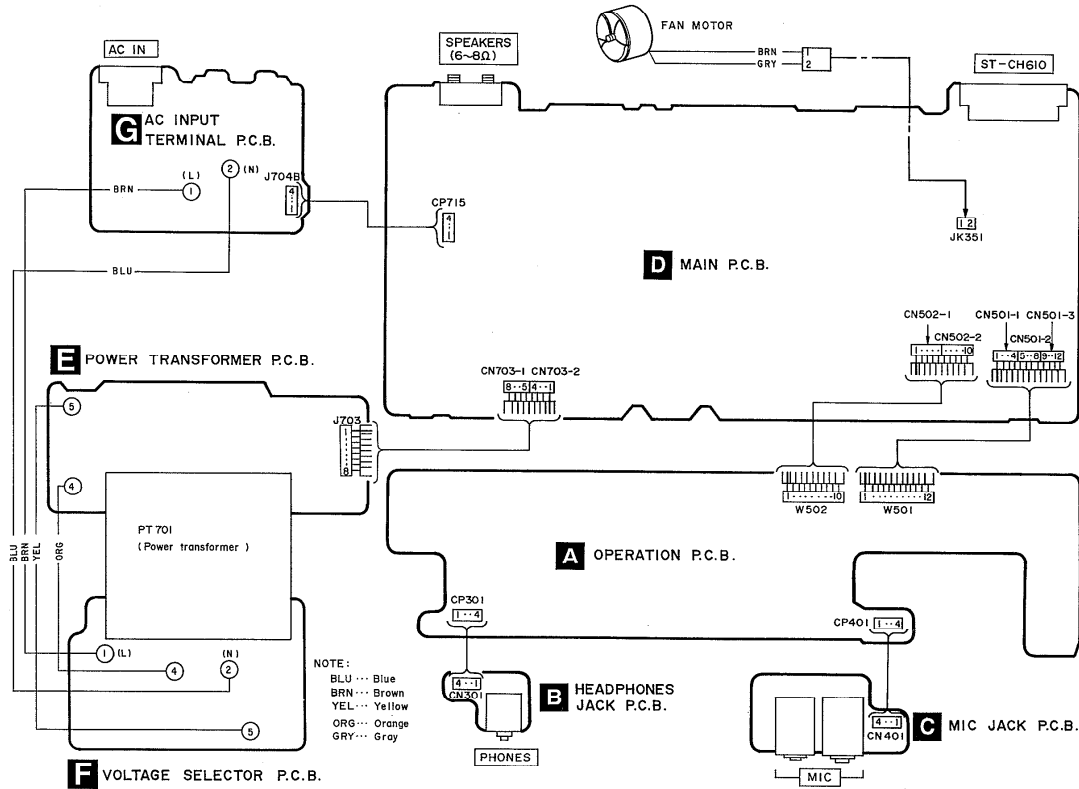


## Function of IC Terminals

### IC601 (LC65204A4E11)

Pin No.	Terminal Name	I/O	Function
1	ADL	I	L-ch level signal input from IC602
2	ADR	I	R-ch level signal input from IC602
3	PA2	—	—
4	CHECK	I	Check mode input (Mode ON: "H")
5	CS1	—	Connected to GND
6	CS2		
7	PB2	—	—
8	START	I	Power ON detection signal input
9	AV +	I	A/D converter standard voltage input
10	AV -	—	
11	Vss	—	Connected to GND
12	OSC1	I/O	Clock signal input/output (Connected to X601)
13	OSC2		
14	VDD	I	Power supply terminal (+5 V input)
15	/RESET	I	Reset signal input (Operation mode: "H", Reset mode "L")

Pin No.	Terminal Name	I/O	Function
16	×1	I	Connected to VDD
17	×2	—	—
18	TEST	—	Connected to GND
19	DATA	I	No used (active pull-up)
20	PF1	—	—
21	CLK	I	No used (active pull-up)
22	INTO	I	Power OFF detection signal input
23 ~26	P1~P4	—	—
27	P25	—	—
28 ~31	P24~P21	O	FL segment drive output
32	P20	—	—
33 ~47	P19~P5	O	FL segment drive output
48 ~51	4G~1G	O	FL grid drive output
52	VP	—	FL pull-down power source input

# Block Diagram

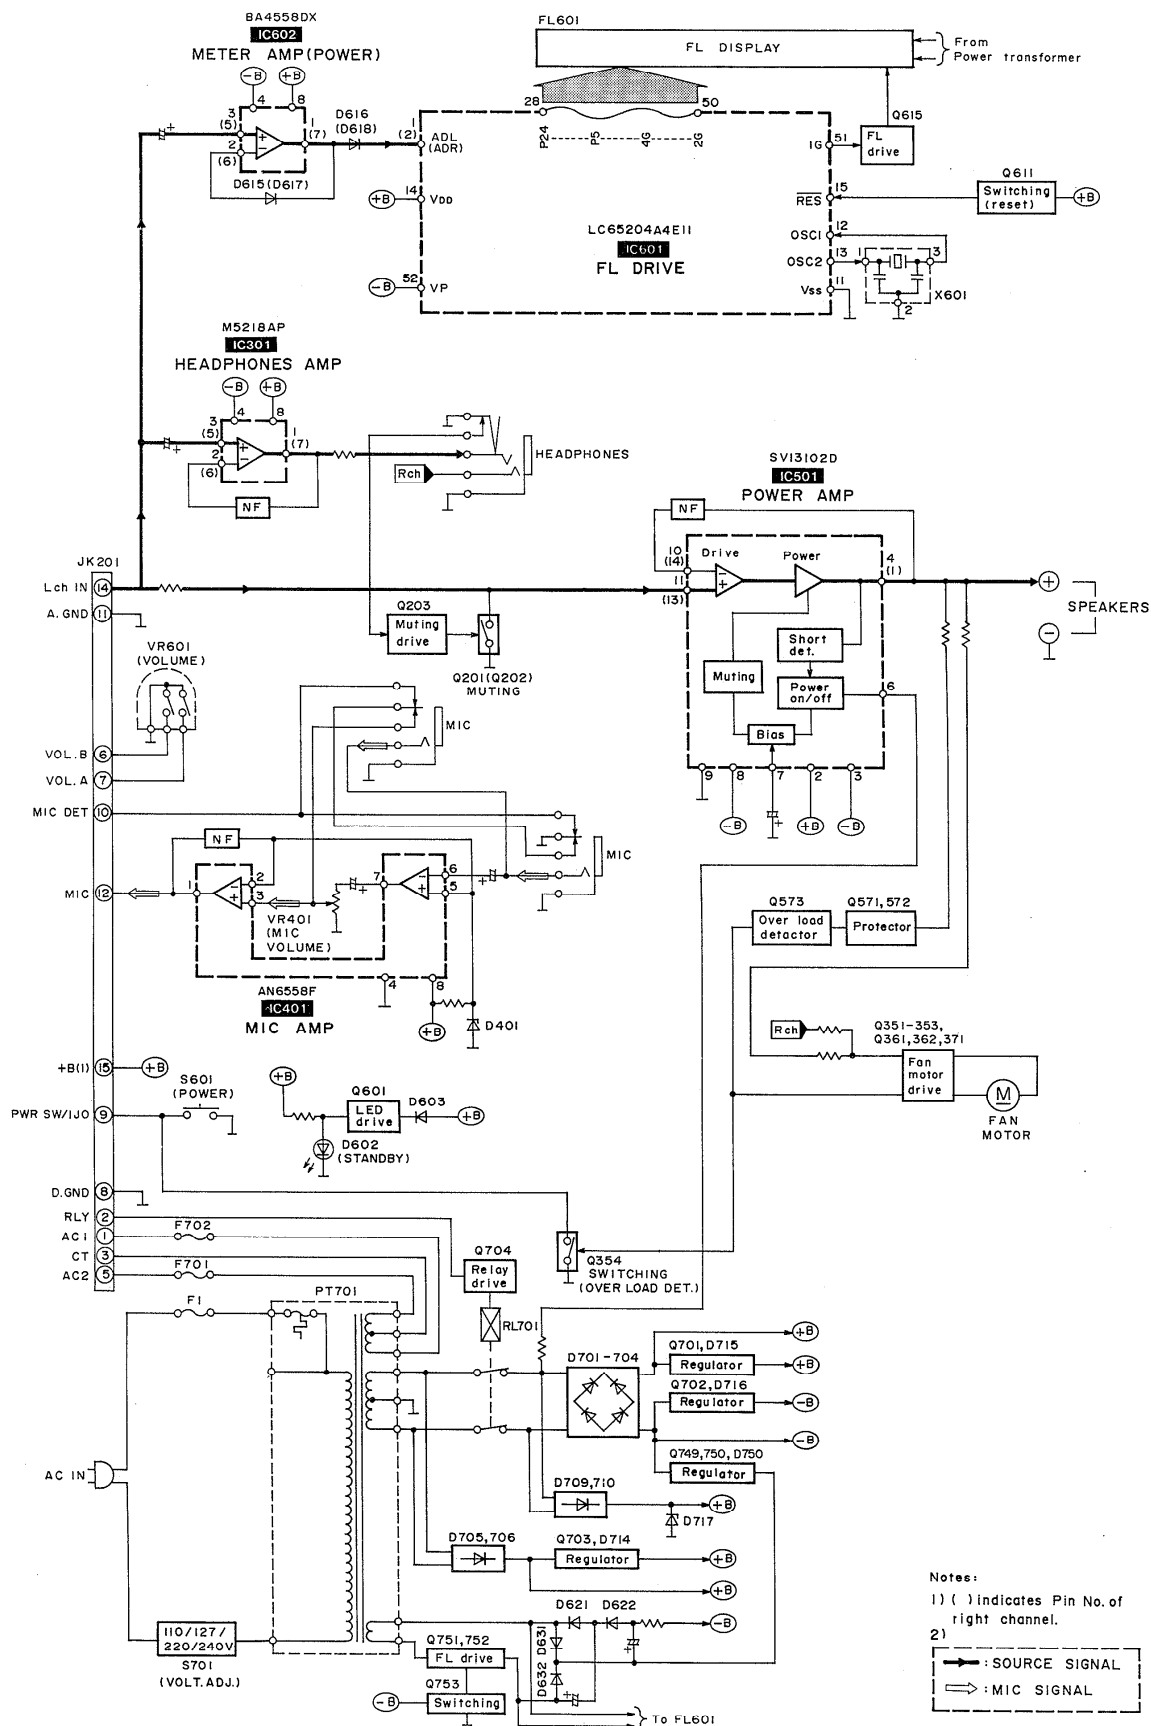

# Replacement Parts List

**Notes:** \*Important safety notice:

Components identified by  $\Delta$  mark have special characteristics important for safety.  
 Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.  
 When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.  
 \*The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)  
 Parts without these indications can be used for all areas.  
 \*Remote Control Assy: Supply period for three years from termination of production.  
 \*The "(SF)" mark denotes the standard part.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)		D615-618	MA165	DIODE	
				D620	MA4062MTA	DIODE	$\Delta$
				D621, 622	MA165	DIODE	
IC301	M5218AP	HEADPHONES AMP.		D631, 632	MA165	DIODE	
IC401	AN6558F	MIC AMP.		D633, 634	MA4043M	DIODE	
IC501	SVI3102D	POWER AMP.	$\Delta$	D701-704	1N5402BF	DIODE	$\Delta$
IC601	LC65204A4E11	FL DRIVE		D705, 706	RL1N4003N02	DIODE	$\Delta$
IC602	BA4558DX	METER AMP.		D709, 710	MA185TA	DIODE	$\Delta$
		TRANSISTOR(S)		D711	MA165	DIODE	
				D712	MA4240H	DIODE	
				D714	MA4062-H	DIODE	$\Delta$
Q201, 202	2SD1450RTA	TRANSISTOR		D715, 716	MA4150M	DIODE	$\Delta$
Q203	UN4115	TRANSISTOR		D717	MA4051MTA	DIODE	$\Delta$
Q351	2SC3311AIRTA	TRANSISTOR		D750	MA4200M	DIODE	$\Delta$
Q352	KSD471ACYGTA	TRANSISTOR	$\Delta$			VARIABLE RESISTOR(S)	
Q353, 354	2SC3311AIRTA	TRANSISTOR					
Q361	KSD471ACYGTA	TRANSISTOR	$\Delta$	VR401	EVJ02BF02B14	V. R, MIC VOLUME	
Q362	2SC3327-A	TRANSISTOR	$\Delta$	VR601	RRV16B24104F	V. R, VOLUME	
Q371	2SC3311AIRTA	TRANSISTOR				COIL(S)	
Q571, 572	2SC3311AIRTA	TRANSISTOR					
Q573	2SA1309A1QTA	TRANSISTOR		L501, 502	RLQYR73M	COIL	
Q601	UN4211	TRANSISTOR		L601	ELEXT100KA9	COIL	
Q611	UN4211	TRANSISTOR				OSCILLATOR(S)	
Q615	UN4111AITA	TRANSISTOR					
Q701	2SD2374PQAU	TRANSISTOR	$\Delta$	X601	EFOEC4004T4	OSCILLATOR(4MHz)	
Q702	2SB1548PQAU	TRANSISTOR	$\Delta$			DISPLAY TUBE	
Q703	2SC3940AQSTA	TRANSISTOR	$\Delta$				
Q704	2SC3311AIRTA	TRANSISTOR		FL601	RSL0187-F	DISPLAY TUBE	
Q749	2SB1417PQTA	TRANSISTOR	$\Delta$			FUSE(S)	
Q750	2SB1417PQTA	TRANSISTOR	$\Delta$				
Q751, 752	2SD1450RTA	TRANSISTOR		F1	XBA2C25TB0	FUSE, 250V, T2. 5A	$\Delta$
Q753	UN4111AITA	TRANSISTOR		F2	XBA2C12TB0S	FUSE, 250V, T1. 25A	$\Delta$
		DIODE(S)		F701, 702	XBA2C16TB0	FUSE, 250V, T1. 6A	$\Delta$
D351	MA165	DIODE				SWITCH(ES)	
D352	MA4068M	DIODE	$\Delta$				
D361	MA4091-M	DIODE	$\Delta$	S601	EVQ21405R	SW, POWER	
D362	MA165	DIODE		S701	ESE37314	SW, VOLTAGE SELECTOR	$\Delta$
D371, 372	MA165	DIODE				CONNECTOR(S)	
D401	MA4062MTA	DIODE					
D602	SLR-305VC	DIODE					
D603	MA165	DIODE					
D611	1SS291TA	DIODE					
D612, 613	MA165	DIODE					
D614	1SS291TA	DIODE					

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
J704B	RJU057W004	SOCKET (4P)					
CN301	RJU057W004	SOCKET (4P)				RELAY	
CN401	RJU057W004	SOCKET (4P)					
CN701-708	RJS1A1101T1	SOCKET (1P)		RL701	RSY0013M-0	RELAY	△
CN501-1-3	RJS1A6604	CONNECTOR (4P)					
CN502-1, 2	RJS1A6605	CONNECTOR (5P)				TRANSFORMER (S)	
CN703-1, 2	RJS1A6604	CONNECTOR (4P)					
CP301	RJT057W004-1	CONNECTOR (4P)		PT701	RTP2M5E003	POWER TRANSFORMER	△
CP401	RJT057W004-1	CONNECTOR (4P)					
CP715	RJT057W004-1	CONNECTOR (4P)				JACK (S)	
		EARTH TERMINAL (S)		JK201	RJT065K20	CONNECTOR (20P)	
				JK301	RJJ37TN01-C	HEADPHONES JACK	
E501	SNE1004-2	GND PLATE		JK351	SJT3213	CONNECTOR (2P)	
E701	SNE1004-2	GND PLATE		JK401	RJJ65MA01	MIC JACK	
				JK402	RJJ65MA01	MIC JACK	
		FUSE HOLDER (S)		JK501	RJR0054M	SPEAKER TERMINAL	
				JK701	SJS9236	AC INLET	△
FC1-8	EYF52BC	FUSE HOLDER		JK702	SJS702-1	CONNECTOR (6P)	

Notes : \* Capacity values are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)  
 \* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k (OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS	R362	ERDS2TJ102	1/4W 1K	R517, 518△	ERD25FVJ100T	1/4W 10
			R363, 364	ERDS2TJ103	1/4W 10K	R519, 520	ERDS2TJ332	1/4W 3.3K
			R371, 372	ERDS2TJ273	1/4W 27K	R571	ERDS2TJ823T	1/4W 82K
R159	ERDS2TJ100	1/4W 10	R373	ERDS2TJ222	1/4W 2.2K	R572	ERDS2TJ124T	1/4W 120K
R217, 218	ERDS2TJ102	1/4W 1K	R374	ERDS2TJ273	1/4W 27K	R573	ERDS2TJ563	1/4W 56K
R223, 224	ERDS2TJ472	1/4W 4.7K	R375	ERDS2TJ822	1/4W 8.2K	R574	ERDS2TJ564	1/4W 560K
R251	ERDS2TJ222	1/4W 2.2K	R391	ERDS2TJ473	1/4W 47K	R575	ERDS2TJ223	1/4W 22K
R253, 254	ERDS2EJ121	1/4W 120	R401, 402	ERDS2TJ123	1/4W 12K	R608	ERDS2TJ471	1/4W 470
R255	ERDS2TJ154	1/4W 150K	R403	ERDS2TJ473	1/4W 47K	R611, 612	ERDS2TJ333	1/4W 33K
R256	ERDS2TJ105T	1/4W 1M	R404	ERDS2TJ122	1/4W 1.2K	R615, 616	ERDS2TJ123	1/4W 12K
R259	ERDS2TJ561	1/4W 560	R405	ERDS2TJ474	1/4W 470K	R617, 618	ERDS2TJ273	1/4W 27K
R291, 292	ERDS2TJ104	1/4W 100K	R406	ERDS2TJ102	1/4W 1K	R619, 620	ERDS2TJ223	1/4W 22K
R301, 302	ERDS2TJ223	1/4W 22K	R407	ERDS2TJ104	1/4W 100K	R621, 622	ERDS2TJ824	1/4W 820K
R303, 304	ERDS2TJ333	1/4W 33K	R408	ERDS2TJ473	1/4W 47K	R623, 624	ERDS2TJ220T	1/4W 22
R305, 306	ERDS2TJ223	1/4W 22K	R409	ERDS2TJ682T	1/4W 6.8K	R625, 626	ERDS2TJ223	1/4W 22K
R307, 308	ERDS2TJ561	1/4W 560	R410	ERDS2TJ102	1/4W 1K	R627, 628	ERDS2TJ102	1/4W 1K
R309-312	ERDS2EJ121	1/4W 120	R411	ERDS2TJ562	1/4W 5.6K	R635, 636	ERDS2TJ224T	1/4W 220K
R351	ERDS2TJ183T	1/4W 18K	R412	ERDS2TJ102	1/4W 1K	R637	ERDS2TJ104	1/4W 100K
R352	ERDS2TJ473	1/4W 47K	R420	ERDS2TJ104	1/4W 100K	R638	ERDS2TJ102	1/4W 1K
R353	ERDS2TJ103	1/4W 10K	R501, 502	ERDS2TJ222	1/4W 2.2K	R639	ERDS2TJ223	1/4W 22K
R354	ERDS2TJ104	1/4W 100K	R503-506	ERDS2TJ563	1/4W 56K	R646	ERDS2TJ103	1/4W 10K
R355	ERDS2TJ103	1/4W 10K	R507, 508	ERDS2TJ152	1/4W 1.5K	R651	ERDS2TJ104	1/4W 100K
R356	ERDS2TJ332	1/4W 3.3K	R509, 510	ERDS2TJ561	1/4W 560	R652	ERDS2TJ102	1/4W 1K
R357 △	ERDS1FVJ100T	1/2W 10	R511	ERDS2TJ334	1/4W 330K	R653	ERDS2TJ100	1/4W 10
R358 △	ERDS1FVJ220T	1/2W 22	R512	ERDS2TJ154	1/4W 150K	R654, 655	ERDS2TJ222	1/4W 2.2K
R359	ERDS2TJ273	1/4W 27K	R513	ERDS2TJ684	1/4W 680K	R656, 657	ERDS2TJ103	1/4W 10K
R360	ERDS2TJ222	1/4W 2.2K	R514 △	ERD25FJ470	1/4W 47	R701 △	ERQ16NKW2R2E	1/6W 2.2
R361	ERDS2TJ474	1/4W 470K	R515, 516△	ERDS1FVJ100T	1/2W 10	R702 △	ERD2FCVJ4R7T	1/4W 4.7


Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks			
R703, 704	ERDS2TJ562	1/4W 5.6K	C511, 512	ECBT1H821KB5	50V 820P			
R705, 706△	ERG1SJ561E	1W 560	C513	RCE1HM470BV	50V 47U			
R707 △	ERDS1FVJ820T	1/2W 82	C514	ECA2AAP100B	100V 10U			
R708	ERDS2TJ472	1/4W 4.7K	C515, 516	ECBT1H104ZF5	50V 0.1U			
R709	ERG1SJ391E	1W 390	C517, 518	ECQB1H223JF3	50V 0.022U			
R711	ERG1SJ331E	1W 330	C562	ECEA1HKN010B	50V 1U			
R713	ERDS2TJ1R8T	1/4W 1.8	C571	RCE0JKA101BV	6.3V 100U			
R714	ERDS2TJ153	1/4W 15K	C572	ECBT1E223ZF	25V 0.022U			
R716	ERDS2TJ392T	1/4W 3.9K	C599	ECBT1C103MS5	16V 0.01U			
R717	ERDS2TJ473	1/4W 47K	C601, 602	RCE1CKA100BG	16V 10U			
R751	ERDS2TJ472	1/4W 4.7K	C605, 606	RCE1CKA100BG	16V 10U			
R752	ERDS2TJ222	1/4W 2.2K	C607	RCE0JM102BV	6.3V 1000U			
R753, 754	ERDS2TJ2R7T	1/4W 2.7	C608, 609	ECBT1E103ZF	25V 0.01U			
R780	ERDS2TJ822	1/4W 8.2K	C610	RCE1CKA100BG	16V 10U			
R799	ERDS2TJ103	1/4W 10K	C612	RCE1HKA3R3BG	50V 3.3U			
			C613, 614	ECBT1E103ZF	25V 0.01U			
		CAPACITORS	C615, 616	ECEA1VKA330B	35V 33U			
			C617, 618	RCE1CKA100BG	16V 10U			
C251	RCE0JKA221BV	6.3V 220U	C619, 620	RCE0JKA101BV	6.3V 100U			
C301, 302	RCE1HKA3R3BG	50V 3.3U	C621, 622	ECBT1E223ZF	25V 0.022U			
C303, 304	ECBT1H150J5	50V 15P	C631	RCE0JKA221BV	6.3V 220U			
C305, 306	ECBT1H330J5	50V 33P	C632	ECEA1HKA010B	50V 1U			
C307, 308	RCE1CKA220BG	16V 22U	C642	ECBT1E103ZF	25V 0.01U			
C353	ECEA1HKA2R2B	50V 2.2U	C671, 672	ECBT1C822MS5	16V 8200P			
C361	RCE1CKA470BG	16V 47U	C673, 674	RCE1CKA100BG	16V 10U			
C362	RCE1CKA100BG	16V 10U	C701, 702△	ECEA45V472YB	45V 4700U			
C371	RCE0JKA221BV	6.3V 220U	C703, 704	ECEA1CKA330B	16V 33U			
C372	ECBT1E223ZF	25V 0.022U	C705, 706	ECBT1H104ZF5	50V 0.1U			
C373	ECBT1H104ZF5	50V 0.1U	C707 △	RCE1HM221BV	50V 220U			
C381, 382	ECBT1E103ZF	25V 0.01U	C708	RCE1CKA100BG	16V 10U			
C395, 396	ECBT1E223ZF	25V 0.022U	C709	ECBT1E103ZF	25V 0.01U			
C397, 398	ECBT1E103ZF	25V 0.01U	C710	ECBT1C103MS5	16V 0.01U			
C401, 402	ECBT1H221KB5	50V 220P	C711	ECQE1104KF3	100V 0.1U			
C403	RCE1HKA3R3BG	50V 3.3U	C712	ECBT1E223ZF	25V 0.022U			
C404	ECBT1H221KB5	50V 220P	C714	ECKR1H103ZF5	50V 0.01U			
C405	ECBT1H101KB5	50V 100P	C731, 732	ECKT1H102KB	50V 1000P			
C406	RCE1CKA100BG	16V 10U	C751	RCE1VKA100BG	35V 10U			
C407	RCE1HKA3R3BG	50V 3.3U	C752	ECKR1H103ZF5	50V 0.01U			
C408	ECBT1H181KB5	50V 180P	C799	ECBT1H104ZF5	50V 0.1U			
C409	ECEA1HKA010B	50V 1U	C905, 906	ECBT1H101KB5	50V 100P			
C410	ECBT1H221KB5	50V 220P	C1101, 1102	ECBT1E223ZF	25V 0.022U			
C411	ECBT1E103ZF	25V 0.01U	C1103-1106	ECBT1H102KB5	50V 1000P			
C412	ECBT1E223ZF	25V 0.022U						
C414	ECEA1AKA221B	10V 220U						
C415	ECBT1H102KB5	50V 1000P						
C416	RCE1AKA101BG	10V 100U						
C421	ECBT1H102KB5	50V 1000P						
C501, 502	ECA1HAP3R3B	50V 3.3U						
C503, 504	ECBT1H331KB5	50V 330P						
C505, 506	ECBT1H150J5	50V 15P						
C507, 508	ECQV1H563JM3	50V 0.056U						
C509, 510	RCE1HKA3R3BG	50V 3.3U						

**Note:** The reference number SA represent the grease and tool used for this unit.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET PARTS LIST		P8	RPN0858	PAD (CD)	
				P9	RPN0817	PAD (AMPLIFIER)	
				P10	SPP740	PROTECTION COVER	
1	RKM0265A-K	CABINET		P11	XZB25X34C03Y	PROTECTION COVER	
2	RHD30007-K1	SCREW		P12	RPQF0047	ACCESSORIES BOX	
3	RFKJECH610GC	BOTTOM BOARD ASS'Y					
3-1	RKA0011-3	FOOT				ACCESSORIES	
4	RFKJECH610GC	REAR GRILL ASS'Y					
5	RKQ0089	P. C. B. SPACER		A1	RAK-CH159WH	REMOTE CONTROL TRANSMITTER	
6	RMCO158	TRANSISTOR HOLDER		A1-1	RKK0057-K	BATTERY COVER	
7	RMNO291	HOLDER		A2	REE0499	SPEAKER CABLE	
8	RFKJECH610GC	FRONT PANEL ASS'Y		A3	REX0511	FLAT CABLE (LONG TYPE)	
8-1	RKW0356-V	FL PANEL		A4	REX0608	FLAT CABLE (SHORT TYPE)	
9	RGL0258-Q	PANEL LIGHT		A5	RJA0019-2K	AC POWER SUPPLY CORD	△ (SF)
10	RGU1077-K	BUTTON, POWER		A6	RQT2723-G	INSTRUCTION MANUAL	
11	XTBS3+8JFZ1	SCREW		A8	RQCB0169	SERVICE CENTER LIST	
12	RGW0178-1K	KNOB, MIC VOLUME		A9	RSA0007	FM INDOOR ANTENNA	
13	RWJ1812220QC	FLAT CABLE (12P) (W501)		A10	RSA0012	AM LOOP ANTENNA	
14	RWJ1810220QC	FLAT CABLE (10P) (W502)		A10-1	RMNO244	ANTENNA HOLDER	
15	RGW0207-K	KNOB, MAIN VOLUME		A10-2	XTN3+12AFZ	SCREW	
16	XTBS26+8J	SCREW		A11	SJP5213-1	POWER PLUG ADAPTOR	
17	RHD26016	SCREW		A12	RFE0014	ANTENNA PLUG	
18	RHN90001	NUT				GREASE OR JIG/TOOL	
19	XTB3+10JFZ	SCREW					
20	XTB3+20JFZ	SCREW		SA1	RFKX0002	COMPOUND GREASE	
21	RMNO195	FL SPACER					
22	RMNO290	FL HOLDER					
23	XTB3+8JFZ	SCREW					
24	XTW3+15T	SCREW					
25	RMNO191	HOLDER					
26	RWJ1808100XX	FLAT CABLE (8P) (J703)					
27	RMNO282	FAN ANGLE					
28	SYE1128-4	FAN					
28-1	SHE232	FAN					
28-2	SUS271	SPRING					
28-3	SHE233-1	FAN CASE					
28-4	MDN-4RB4MRC	MOTOR					
28-5	SHE234	CAP					
28-6	SJT783	TERMINAL					
28-7	SJS5215	CONNECTOR (2P)					
29	XTB3+12JFZ	SCREW					
30	RMNO190	HOLDER					
		PACKING MATERIALS					
P1	RPG2155	PACKING CASE (SYSTEM)					
P2	RPG2231	PACKING CASE (DECK)					
P3	RPG2232	PACKING CASE (TUNER)					
P4	RPG2352	PACKING CASE (CD)					
P5	RPG2230	PACKING CASE (AMPLIFIER)					
P6	RPN0815	PAD (DECK)					
P7	RPN0816	PAD (TUNER)					



# Cabinet Parts Location

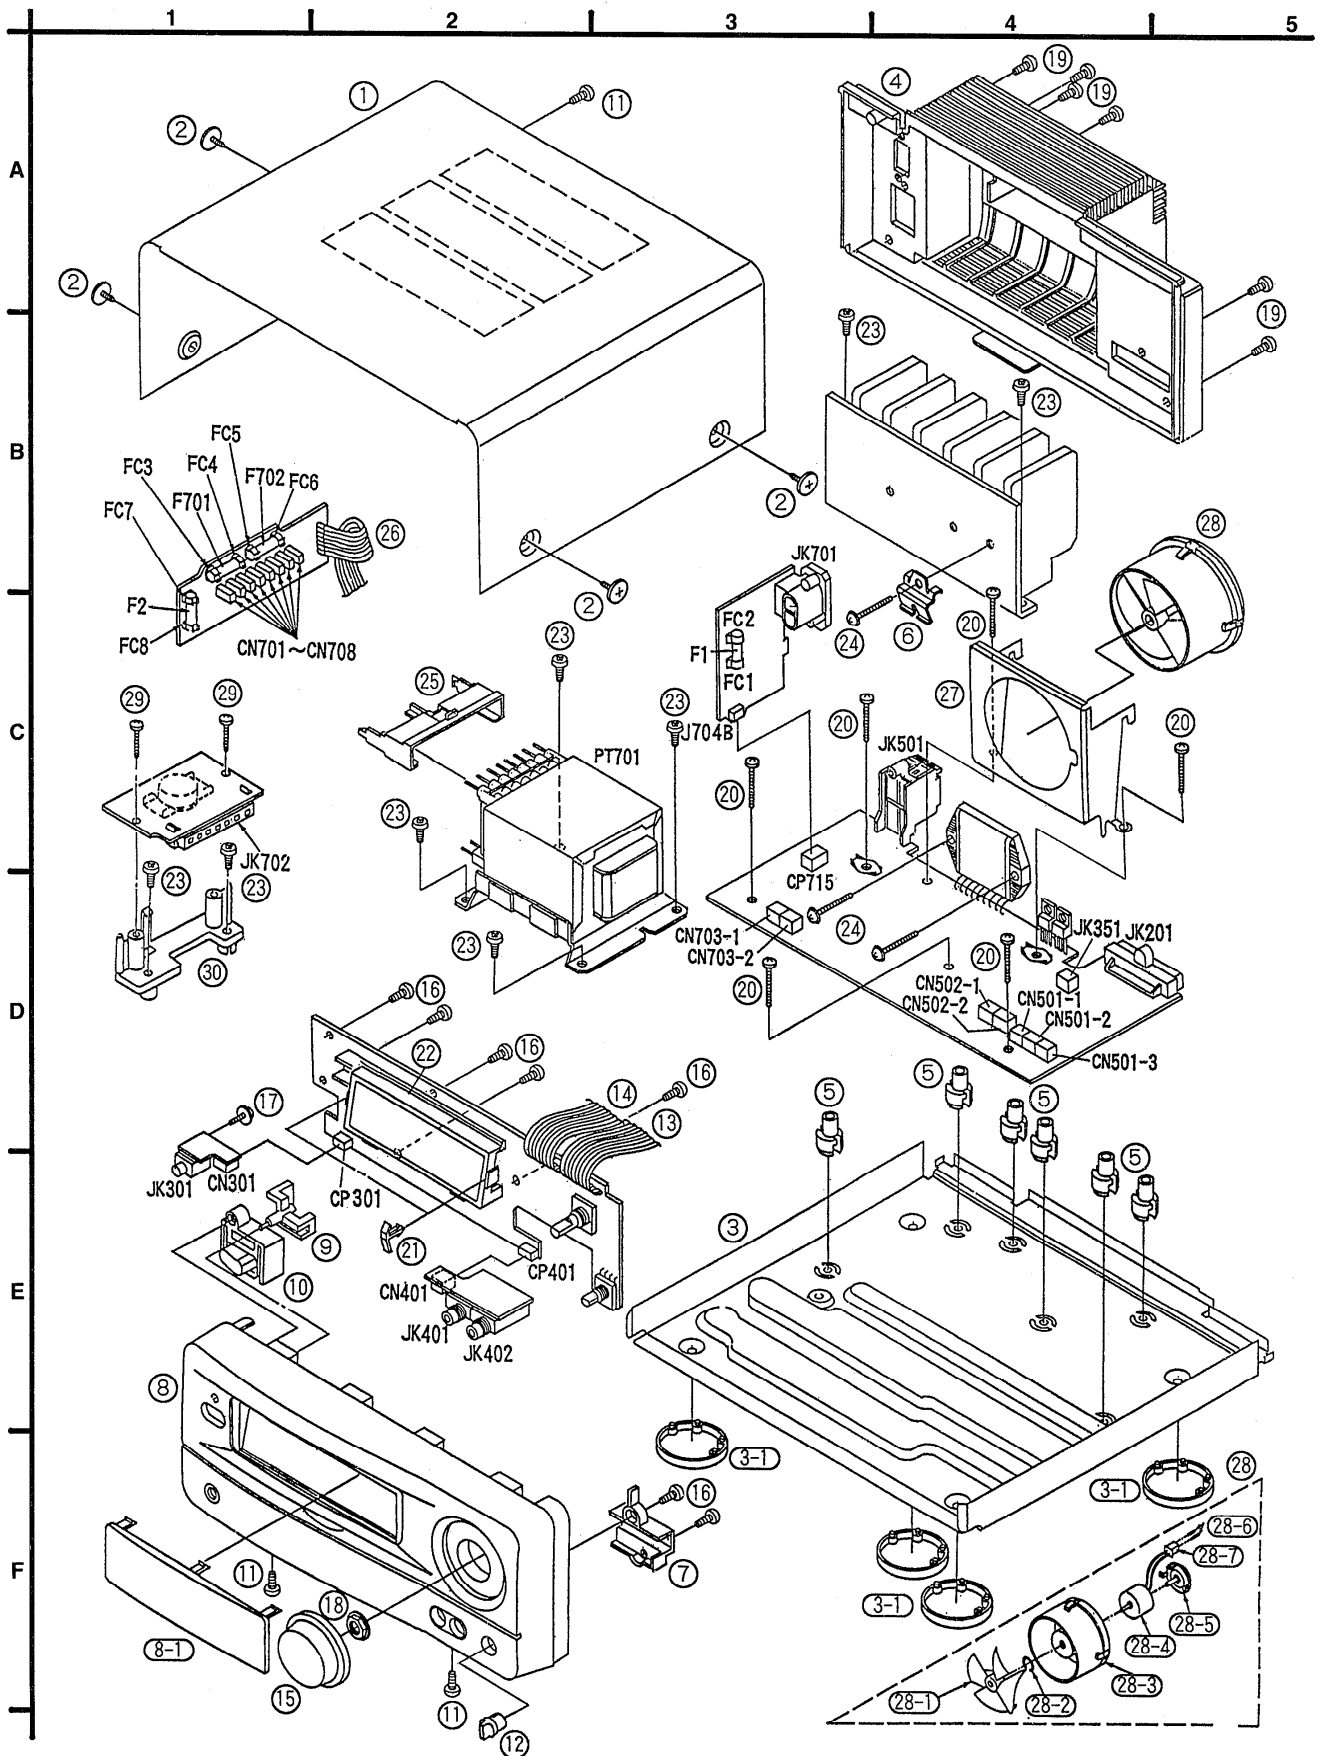

## ■ Packaging

